


Operator's Manual



McElroy Manufacturing, Inc.

The leader by design.


www.mcelroy.com

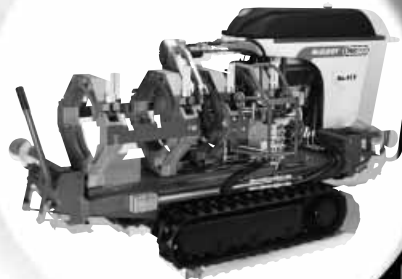

TracStar® No.28 **TracStar® No.412** **TracStar® No.618** Fusion Machines

Patent No's. 5,814,182 6,212,748 6,212,747 6,021,832
(other patents pending)

Manual: T1210801 Revision: C 7/04

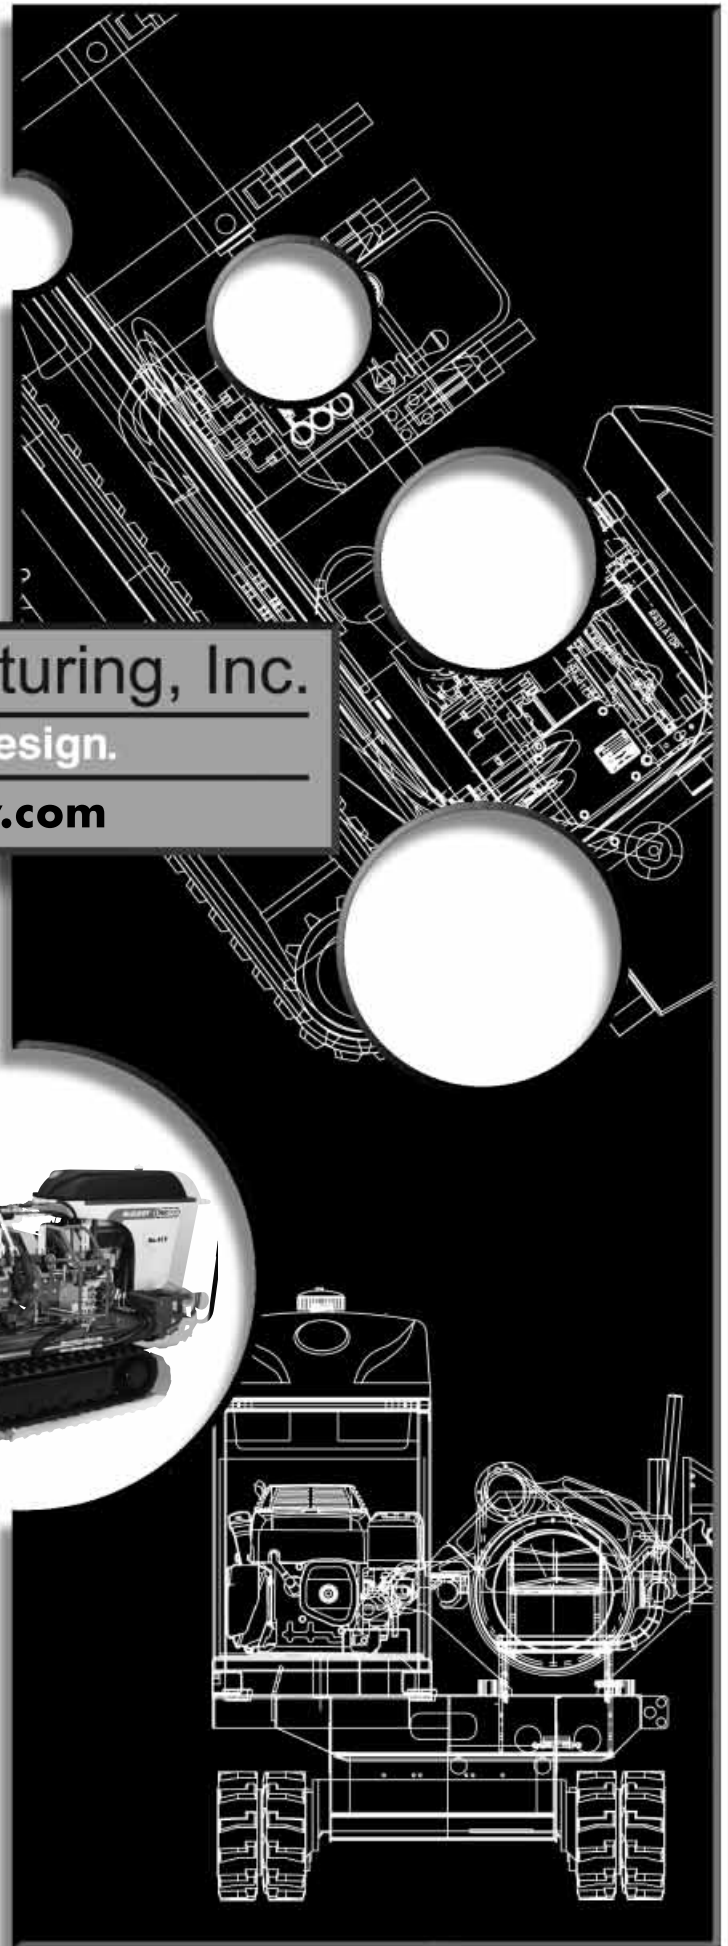

**California
Proposition 65 Warning**

*Engine exhaust from this product
contains chemicals known to the State
of California to cause cancer, birth
defects, or other reproductive harm.*



Introduction



Thank you for purchasing this McElroy product

The McElroy TracStar® No.28/No.412/No.618 self-contained, self-propelled, all terrain fusion machine, and is designed to produce consistently high quality polyolefin pipe butt fusion joints with a minimum of operator effort.

The TracStar® No.28 model fuses 2" IPS (63mm) minimum to 8" DIPS (225mm) maximum pipe.

The TracStar® No.412 model fuses 4" IPS (110mm) minimum to 12" DIPS (340mm) maximum pipe.


The TracStar® No.618 model fuses 6" IPS (180mm) minimum to 18" IPS (450mm) maximum pipe.

With reasonable care and maintenance, this machine will give years of exemplary service.

TX01853-9-27-00

Before operating this machine, please read this manual thoroughly, and keep a copy with the machine for future reference. This manual is to be considered part of your machine.

Always return the manual to the literature compartment.

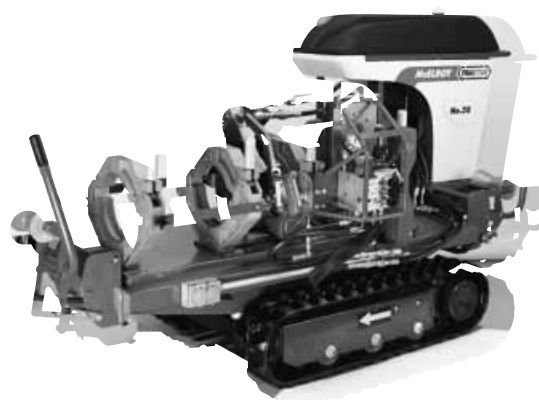

PH01854-9-27-00

Patent No's. 5,814,182 6,212,748 6,212,747 6,021,832
(other patents pending)

World Class Training

This manual is intended as a guide only and does not take the place of proper training by qualified instructors. The information in this manual is not all inclusive and can not encompass all possible situations that can be encountered during various operations.

McElroy Manufacturing, Inc., offers advanced training classes to enhance efficiency, productivity, safety and quality. Training is available at our facility or on-site at your location. Call (918) 836-8611.



PH00917-8-15-97

TX01315-4-7-97



Warranty



LIMITED WARRANTY

McElroy Manufacturing, Inc. guarantees this product to the original purchaser against workmanship and material defects for **three (3) years** from date of shipment, with the exception of purchased items (such as electronic devices, pumps, switches, etc.), in which case that manufacturer's warranty applies. This warranty does not apply to any product or component which has been repaired or altered by anyone other than McElroy Manufacturing, Inc., or has become damaged due to misuse, negligence or casualty, or has not been operated or maintained according to McElroy Manufacturing, Inc.'s printed instructions and warnings.

Claims cannot be allowed until the questioned product has been received, freight prepaid, at the manufacturer's factory, with complete information and data regarding the failure. Materials returned to McElroy Manufacturing, Inc. for warranty work, repair, etc., **must have a Return Material Authorization (RMA) number**, and be so noted on the package at time of shipment. This number may be obtained by calling (918) 836-8611. If seller's review indicates that warranty applies, the defective product will be repaired or replaced and returned to purchaser F.O.B. Tulsa, Oklahoma.

McElroy Manufacturing, Inc. is not responsible or liable for loss of any sort including incidental and consequential damages.

McElroy Manufacturing, Inc. specifically disavows any other representations as to warranty or liability, related to the condition or use of the product.

For assistance, inquiries shall be directed to McElroy Manufacturing, Inc., P.O. Box 580550, 833 North Fulton, Tulsa, Oklahoma 74158-0550, (918) 836-8611, Fax No. (918) 831-9285, www.mcelroy.com

Register Your Warranty Online:

www.mcelroy.com

DISCLAIMER OF LIABILITY

McElroy Manufacturing, Inc. accepts no responsibility of liability for fusion joints. Operation and maintenance of the product is the responsibility of others. We recommend qualified joining procedures be followed when using McElroy fusion equipment.

McELROY MAKES NO OTHER WARRANTY OF ANY KIND WHATEVER, EXPRESS OR IMPLIED; AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE AFORESTATED OBLIGATION ARE HEREBY DISCLAIMED BY McELROY.

PRODUCT IMPROVEMENT

McElroy Manufacturing, Inc. reserves the right to make any changes in or improvements on its products without incurring any liability or obligation to update or change previously sold machines and/or the accessories thereto.

TERMS AND CONDITIONS

Net 30 Days - Subject to credit approval. A carrying charge of 1-1/2% per month computed from invoice date will apply to invoices not paid within 30 Day Terms.

McElroy Manufacturing, Inc. must be notified of any discrepancy in shipment, order, and/or invoice within 10 days after receipt.

Freight is F.O.B. Tulsa, Oklahoma - usually motor freight collect or UPS unless otherwise specified.

Prices are subject to change without notice.

Minimum order is \$50.00.

(Copy information listed on the Warranty Card for your records).

Model No. _____

Serial No. _____

Date Received _____

Distributor _____



Table of Contents



Equipment Safety

Safety Alerts	1-1
Read and Understand	1-1
General Safety	1-2
Wear Safety Equipment	1-2
Fuel Handling	1-2
Units with Engines	1-3
Carbon Monoxide	1-3
Heater is Not Explosion Proof	1-3
Electric Motors and Alternators are Not Explosion Proof.	1-3
Battery	1-4
Electrical Safety	1-4
Crush Points	1-5
Facer Blades are Sharp	1-5
Units with Hydraulics	1-5
Keep Machine Away from Edge of Ditch	1-6
Operating Fusion Machine	1-6
Do Not Attempt to Tow Fusion Machine	1-6
Heater is Hot.	1-6
Fusion Procedures	1-7
Periodically Check Temperature	1-7
Hearing Protection Required	1-7
Positioning Fusion Machine	1-7

Overview

Theory of Heat Fusion	2-1
Carriage Assembly	2-2
Chassis.	2-2
Gas Powered Units	2-3
Tach and Hour Meter for Gas Unit.	2-3
Diesel Powered Units	2-3
Diesel & Gas Engine Controls	2-4
Power for Heater	2-4
Oil Reservoir.	2-4
Hydraulic Oil Filter	2-4
Hydraulic Manifold Block	2-5
Hydraulic Cylinders	2-5
Facer	2-6
Insulated Heater Stand	2-6
Heater	2-7

COPYRIGHT © 2004

McELROY MANUFACTURING, INC.

Tulsa, Oklahoma, USA

All rights reserved

All product names or trademarks are property of their respective owners. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.



Table of Contents



Operation

Read Before Operating	3-1
Check Oil Level	3-1
Diesel Engine	3-1
Gas Powered Units	3-1
Moving Machine into Position	3-2
Prepare Heater	3-2
Set up Pipe Supports	3-2
Install Clamping Inserts	3-3
Check Hydraulic Pressure	3-3
Loading Pipe Into Machine	3-4
Positioning Pipe in Machine	3-4
Facing the Pipe	3-4
Remove Facer	3-5
Position Carriage for Heater Insertion	3-6
Check Heater Temperature	3-6
Select the Fusion Position	3-6
Inserting Heater	3-7
Heating the Pipe	3-7
Fusing the Pipe	3-8
Opening Movable Jaws	3-8
Opening Fixed Jaws	3-9
Raise Pipe	3-9
Hydraulic Pipelifts	3-9
Position Pipe for Next Joint	3-10
Install Next Piece of Pipe	3-10

Special Operations - In Ditch

Disconnect Hydraulic Hoses	4-1
Remove Carriage Assembly from the Chassis	4-1
Remove 3-Jaw Assembly from the Carriage	4-2
Remove Facer from TracStar No.412 & No.618	4-3
Remove Facer from TracStar No.28	4-4
Manual Facer Operation	4-5
Removing Top Jaws	4-6
Lower 3-Jaw or 4-Jaw Carriage into Ditch	4-6
Clamp Carriage Assembly to Pipe	4-7
Attach Hydraulic Hoses	4-8
Make Fusion Joint	4-8
Remove Carriage Assembly from Ditch	4-8
Reassemble Fusion Machine	4-8

Special Operations - Saddle Fusion Procedures

Saddle Fusion Procedure for TracStar No.28	5-1
Install Heater Adapters	5-1
Assure Saddle will Fit	5-1
Install Clamping Inserts	5-2
Remove Carriage Assembly from Vehicle	5-2
Attach Carriage Assembly to Main	5-2
Set Hydraulic Pressure	5-2
Clean Surfaces	5-3



Table of Contents



Special Operations - Saddle Fusion Procedures - Continued

Clamp Fitting	5-3
Test for Slippage	5-3
Prepare Heater	5-4
Heat Pipe and Fitting	5-4
Remove Heater	5-4
Fuse Fitting to Pipe	5-5
Allow Joint to Cool	5-5

Special Operations - Lifting the Machine

Heavy Overhead Load	6-1
Crush Points	6-1
Required Equipment	6-1
Attach Slings	6-2
Lifting Safety	6-2

Maintenance

Preventative Maintenance	7-1
Washing the Machine	7-1
Check Hydraulic Fluid	7-1
Change Hydraulic Fluid and Filter	7-1
Install/Remove Covers	7-2
Engine Belt Tension Adjustment	7-3
Tensioning the Belt	7-3
Adjusting System Pressure	7-3
Engine Oil System - Diesel	7-4
Engine Oil System - Gasoline	7-4
Check Gauge Calibration	7-5
Clean Jaws and Inserts	7-5
Clean Thrust Bearings	7-5
Clean Eyebolt Threads	7-5
Clean the Clamping Chains	7-6
Fasteners Must Be Tight	7-6
Facer Blades	7-6
Check/Add Antifreeze	7-6
Clean Heater Surfaces	7-7
Bleeding Air From Hydraulic System	7-7
Installing Butt Fusion Heater Adapter	7-8
Adjusting Heater Temperature	7-8
Indicator Light	7-8
Engine Maintenance	7-9
Checking Track Tension	7-9
Adjusting Track Tension	7-10
Setting Engine Speed	7-10

Machine Maintenance Checklist

Machine Checklist	8-1
-----------------------------	-----

Determining Fusion Pressure

Determining Fusion Pressure	9-1
---------------------------------------	-----

Hydraulic Fluid

Hydraulic Fluid Characteristics	10-1
---	------

Specifications

TracStar® No.28 & No.412 Fusion Machine Specifications	11-1
TracStar® No.618 Fusion Machine Specifications	11-2



Fusion Equipment Safety



Safety Alerts

This hazard alert sign  appears in this manual. When you see this sign, carefully read what it says. YOUR SAFETY IS AT STAKE.

You will see the hazard alert sign with these words: DANGER, WARNING, and CAUTION.



WR00051-11-30-92



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



In this manual you should look for two other words: **NOTICE** and **IMPORTANT**.

NOTICE: can keep you from doing something that might damage the machine or someone's property. It may also be used to alert against unsafe practices.

IMPORTANT: can help you do a better job or make your job easier in some way.

TX00030-12-1-92


Read and Understand

Do not operate this equipment until you have carefully read, and understand the "Safety" and "Operation" sections of this manual, and all other equipment manuals that will be used with it.

Your safety and the safety of others depends upon care and judgment in the operation of this equipment.

Follow all applicable federal, state, local, and industry specific regulations.

McElroy Manufacturing, Inc. cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this manual and on the machine are therefore not all inclusive. You must satisfy yourself that a procedure, tool, work method, or operating technique is safe for you and others. You should also ensure that the machine will not be damaged or made unsafe by the method of operation or maintenance you choose.

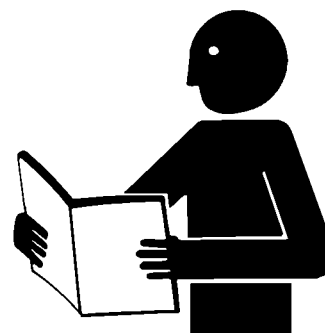

WR00052-12-1-92

TX00031-12-8-92



Fusion Equipment Safety



General Safety

Safety is important. Report anything unusual that you notice during set up or operation.

LISTEN for thumps, bumps, rattles, squeals, air leaks, or unusual sounds.

SMELL odors like burning insulation, hot metal, burning rubber, hot oil, or natural gas.

FEEL any changes in the way the equipment operates.

SEE problems with wiring and cables, hydraulic connections, or other equipment.

REPORT anything you see, feel, smell, or hear that is different from what you expect, or that you think may be unsafe.




SAFE1ST-12-22-92

TX00114-4-22-93

Wear Safety Equipment

Wear a hard hat, safety shoes, safety glasses, and other applicable personal protective equipment.

Remove jewelry and rings, and do not wear loose-fitting clothing or long hair that could catch on controls or moving machinery.

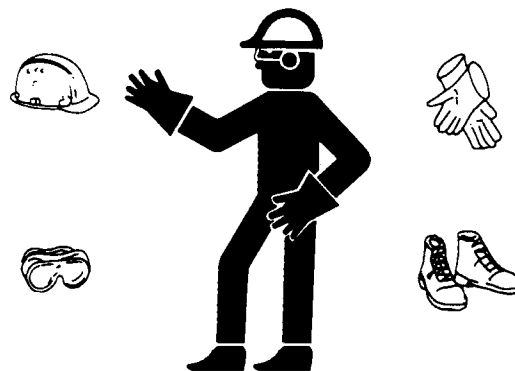

WR00053-12-2-92

TX00032-4-7-93

Fuel Handling



Gasoline and diesel fuel are extremely flammable and their vapors will explode if ignited.


Do not fill the fuel tank while the engine is hot or running, as spilled fuel could ignite.

Refuel in a well ventilated area. Do not smoke or allow flames or sparks in the area where the engine is refueled, or where gasoline is stored.

Do not start the engine near spilled fuel. Wipe up spills immediately.

Make sure the fuel tank cap is closed and properly secured.

Avoid repeated or prolonged contact with skin or breathing of vapor.

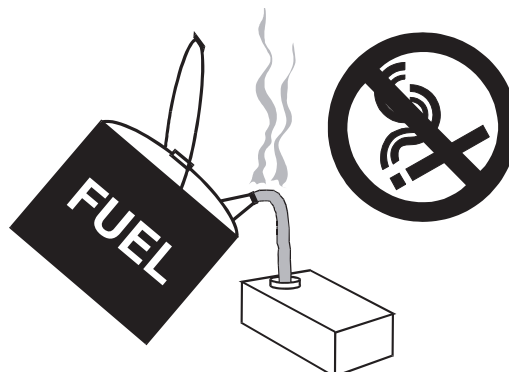

CD003652-19-97

TX00953-2-19-97



Fusion Equipment Safety



Units With Engines

DANGER

Combustion engines can cause explosions when operated in a hazardous environment. Do not operate gas or diesel powered machines in a hazardous environment.

When operating in a hazardous environment, keep engine and chassis in a safe area by using hydraulic extension hoses.

Help prevent fires by keeping machine clean of accumulated trash, debris and facer shavings.



WR00080-4-12-93

TX01266-2-21-97

Carbon Monoxide

DANGER

Engine exhaust gases contain carbon monoxide which can cause severe nausea, fainting and death. Avoid inhaling exhaust fumes and never run the engine in a closed or confined area.



WR00093-5-14-96

TX00954-5-14-96

Heater Is Not Explosion Proof

DANGER

The heater is not explosion proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.

If operating in a hazardous environment, the heater should be brought up to temperature in a safe environment, then **unplugged before entering** the hazardous atmosphere for fusion.



WR00034-11-30-92

TX00100-9-16-94

Electric Motors and Alternators are Not Explosion Proof

DANGER

Electric motors are not explosion proof. Operation of these components in a hazardous environment without necessary safety precautions will result in explosion and death.

When operating in a hazardous environment, keep pump motor and chassis in a safe area by using hydraulic extension hoses.



WR00080-4-12-93

TX00424-8-12-94



Fusion Equipment Safety



Battery

⚠ WARNING

Do not expose the battery to flames or electrical sparks. Hydrogen gas generated by battery action is explosive. Blindness or serious injury can result from an exploding battery.



CD00176-9-14-95

⚠ WARNING

Do not allow battery fluid to contact your skin, eyes, fabrics, or painted surfaces. Sulfuric acid can cause burns. After touching a battery or battery cap, do not touch or rub your eyes.

Thoroughly wash your hands. If the acid contacts your eyes, skin or clothing, immediately flush with water for at least 15 minutes and seek medical attention.



CD00177-9-14-95

TX00650-9-14-95

Electrical Safety

⚠ WARNING

Always ensure power cords are properly grounded. It is important to remember that you are working in a wet environment with electrical devices. Proper ground connections help to minimize the chances of an electric shock.

Frequently inspect electrical cords and unit for damage. Have damaged components replaced and service performed by a qualified electrician.

Do not carry electrical devices by the cord.

NOTICE: Always connect units to the proper power source as listed on the unit, or in the owner's manual. On units with two power cords, plug each cord into separate power circuits. Do not plug into both outlets of one duplex receptacle.

NOTICE: Disconnect the machine from the power source before attempting any maintenance or adjustment.



WR00055-4-7-93



WR00025-11-30-92

TX00105-4-12-93



Fusion Equipment Safety



Crush Points

⚠ WARNING

Hydraulically operated jaws are operated under pressure. Anything caught in the jaws will be crushed. Keep fingers, feet, arms, legs, and head out of the jaw area. Always check pipe alignment with a pencil or similar object.

TX00103-4-6-93



WR00012-12-4-92


Facer Blades Are Sharp

⚠ WARNING

Facer blades are sharp and can cut. Never attempt to remove shavings while the facer is running, or is in the facing position between the jaws. Use care when operating the facer, and when handling the unit.

NOTICE: Disconnect power from the facer, and remove the facer blades before attempting any maintenance or adjustment.

TX00102-4-16-93

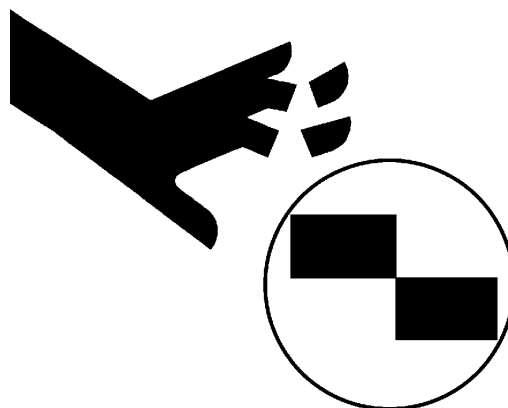

WR00073-4-6-93

Units With Hydraulics

Although the hydraulic pressures in this machine are low compared to some hydraulically operated equipment, it is important to remember that a sudden hydraulic oil leak can cause serious injury, or even be fatal if the pressure is high enough.

⚠ WARNING

Escaping fluid under pressure can penetrate the skin causing serious injury. Keep hands and body away from pinholes which eject fluid under pressure. Use a piece of cardboard or paper to search for leaks. If any fluid is injected into the skin, it must be immediately removed by a doctor familiar with this type of injury.

NOTICE: Wear safety glasses, and keep face clear of area when bleeding air from hydraulic system to avoid spraying oil into eyes.

TX00110-8-23-95



WR00078-4-8-93



Fusion Equipment Safety




Keep Machine Away From Edge of Ditch



Heavy equipment too close to a ditch can cause the walls of the ditch to cave-in. Keep the machine far enough away from the edge of the ditch to prevent injury to personnel and equipment from a cave-in.

TX01447-12-30-97

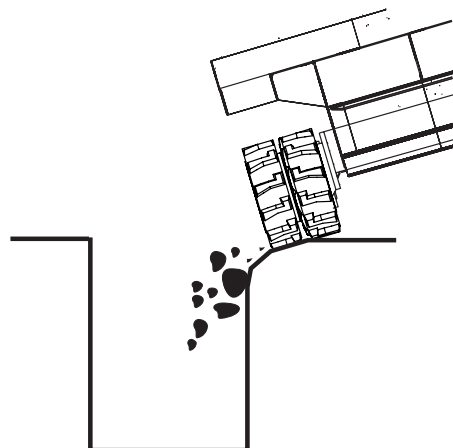

CD00408b-9-27-00

Operating Fusion Machine


Place fusion machine on as level ground as possible.

If it is necessary to operate machine on unlevel grade, make sure that the ground is stable. Some unstable conditions may be ice, snow, mud and loose gravel.



For operation safety, never operate the machine on a grade steeper than 30 %. (A 3 foot elevation change in 10 feet)

TX011902-11-15-00

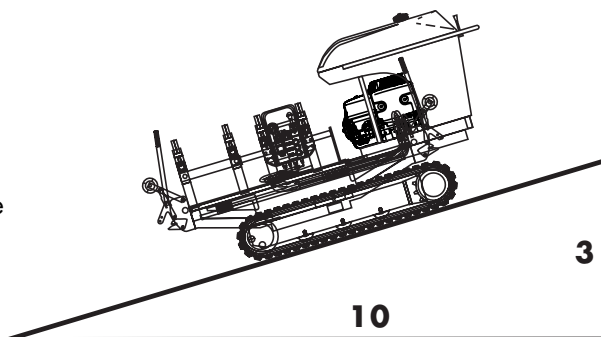


CD00402c-9-27-00

Do Not Attempt to Tow Fusion Machine



The machine is not designed for towing. Attempting to tow the machine can result in machine damage. Always transport the machine by flat bed truck or similar means, and make sure that unit is properly secured.

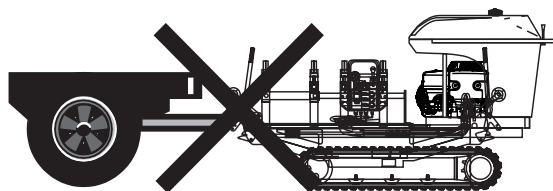

TX01888-11-15-00

CD00401b-9-27-00

Heater is Hot



The heater is hot and will burn clothing and skin. Keep the heater in its insulated heater stand or blanket when not in use, and use care when heating the pipe.

NOTICE: Use only a clean non-synthetic cloth such as a cotton cloth to clean the heater plates.

TX00104-8-12-94



WR00030-2-10-93



Fusion Equipment Safety



Fusion Procedures

Obtain a copy of the pipe manufacturer's procedures for the pipe being fused. Follow the procedure carefully, and adhere to all specified parameters.



Failure to follow pipe manufacturer's procedure could result in a bad joint. Always follow pipe manufacturer's procedures.




WR00079-1-24-96

TX00113-4-12-93

Periodically Check Temperature

NOTICE: Incorrect heating temperature can result in bad fusion joints. Check heater plate surface temperature periodically with a properly calibrated pyrometer, and make necessary adjustments.

The thermometer on heaters indicates internal temperature, and should be used as a reference only.

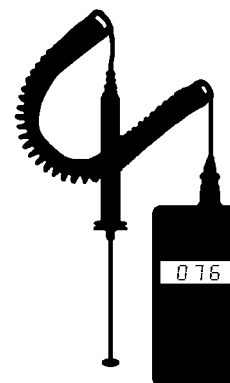


WR00077-4-16-93

TX00107-11-13-95

Positioning Fusion Machine

Place fusion machine on as level ground as possible. If it is necessary to operate machine on unlevel grade, chock the tracks and block the unit to make it as stable as possible.

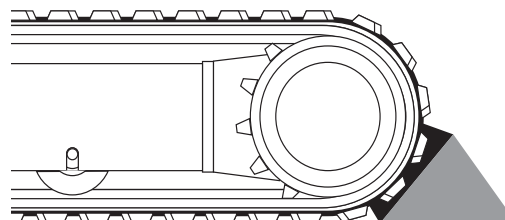


CD00633-9-27-00

TX01889-11-15-00

Hearing Protection Required

When operating machine for more than 4 hours per day wear hearing protection.

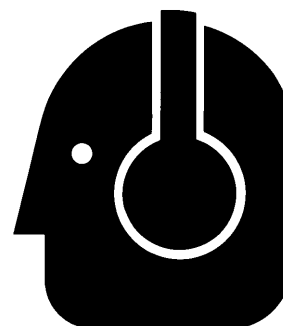

WR00028-1-24-96

TX01890-11-15-00




Theory of Heat Fusion

The principle of heat fusion is to heat two surfaces to a designated temperature, and then fuse them together by application of force. This pressure causes flow of the melted materials, which causes mixing and thus fusion. When the polyethylene material is heated, the molecular structure is transformed from a crystalline state into an amorphous condition. When fusion pressure is applied, the molecules from each Polyethylene part mix. As the joint cools, the molecules return to their crystalline form, the original interfaces are gone, and the fitting and pipe have become one homogeneous unit. The joint area becomes as strong as the pipe itself in both tensile and pressure conditions.

The principle operations include:

- Clamping** The pipe pieces held axially to allow all subsequent operations to take place.
- Facing** The pipe ends must be faced to establish clean, parallel mating surfaces perpendicular to the centerline of the pipes.
- Alignment** The pipe ends must be aligned with each other to minimize mismatch or high-low of the pipe walls.
- Heating** A melt pattern that penetrates into the pipe must be formed around both pipe ends.
- Joining** The melt patterns must be joined with a specified force. The force must be constant around the interface area.
- Holding** The molten joint must be held immobile with a specified force until adequately cooled.

Each pipe manufacturer has a slightly different approach for fulfilling the heating, joining, and holding phases, but the end result is the same – a fusion joint that is as strong or stronger than the pipe itself.

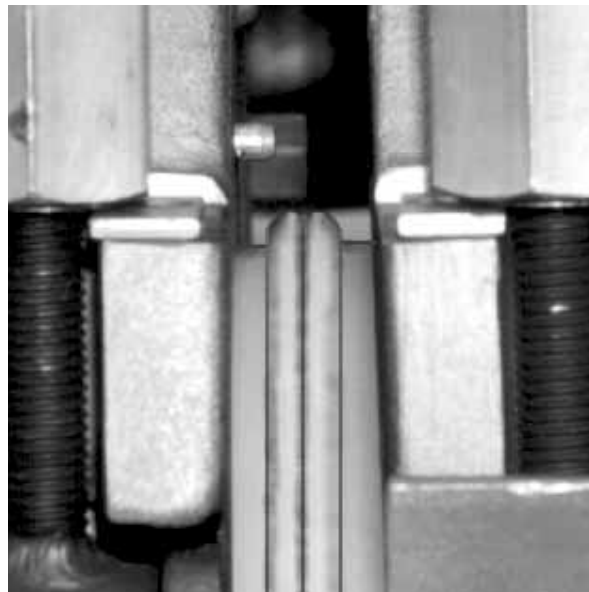

PH00363B-1-496



Overview



Carriage Assembly

The carriage assembly consists of two fixed jaws and two hydraulically operated movable jaws bolted to the skid. For remote operation the carriage can be set in ditch and connected to the machine with optional hydraulic extension hoses. The carriage assembly (A) can be disconnected from the chassis (B) and removed for remote operation. The optional extension hose kit is required for this operation.

A



PH01940-11-15-00

For tight installations the outer fixed jaw and skid can be removed from the carriage for an even more compact fusion unit.

B



PH01953-11-15-00

TX01891-11-15-00

Chassis

The carriage assembly is mounted on a track driven chassis for easy loading and movement along the pipe line.

The engine powers an alternator, used to power the heater, and a hydraulic pump, which powers the fusion machine and the track drive. A belt drive is used to transfer the power. The hydraulic reservoir is mounted above the engine. The fuel tank and battery are installed between the tracks.



PH01966-11-15-00



PH01959-11-15-00

TX01854-11-15-00



Overview



Gas Powered Units

Read the operating and maintenance instructions for the engine before operating.

The engine is a single cylinder, overhead valve, air cooled design. It uses a vacuum operated fuel pump.

The fuel shutoff valve is located by the carburetor.



PH01965-11-15-00



PH02243-1-10-02

TX01987-1-10-02

Tach and Hour Meter for Gas Unit

When the unit is running, the engine speed is displayed. When the unit is not running, total hours of engine operation are displayed.

On diesel powered units an hour meter is provided in the same location.



PH01988-11-15-00

TX01892-11-15-00

Diesel Powered Units

Read the operating and maintenance instructions for the engine before operating.

The engine is a twin cylinder water cooled design. It uses an electric fuel pump located near the fuel tank.



PH01960-11-15-00

TX01855-11-15-00



Overview



Diesel Engine Controls

Read the operating and maintenance instructions for the engine before operating.

There is a key ignition on the console that shows the preheat off, run, and start positions.

Gas Engine Controls

Choke and throttle control is on the dash.

There is a key ignition on the console that shows the off, run, and start positions.

TX01986-1-10-02



PH01969-11-15-00

Power for Heater

The heater cord plugs into a receptacle on the frame.

The 110V receptacle is used for the No.28 Butt Fusion Heater.

The 220V receptacle is used for the No.412 Butt Fusion Heater and the No.28 Sidewall Heaters.

TX01856-9-28-00



PH01922-11-15-00

Oil Reservoir

The oil reservoir is located above the engine.

TX02306-7-28-04



PH02709-07-29-04

Hydraulic Oil Filter

This machine is equipped with a 10 Micron filter on the return side of the hydraulic system.

TX01893-11-15-00



PH01916-11-15-00



Overview



Hydraulic Manifold Block


Mounted on this block are a carriage directional control valve, a pressure reducing selector valve, three pressure reducing valves, and a 1500 psi gauge.

- A) The carriage control valve, mounted on the top of the manifold, determines whether the carriage is moving left, right, or is in neutral.
- B) A 1500 psi gauge is mounted on top of the manifold.
- C) The selector valve, mounted on the front of the manifold, selects a reduced pressure from one of the pressure reducing valves.


Each pressure reducing valve is labeled with a different function:

- D) The top valve adjusts facing pressure to a maximum of 400 psi.
- E) The middle valve adjusts heating pressure to a maximum of 400 psi.
- F) The bottom valve adjusts fusion pressure to a maximum of 1500 psi.

TX00357-11-3-94

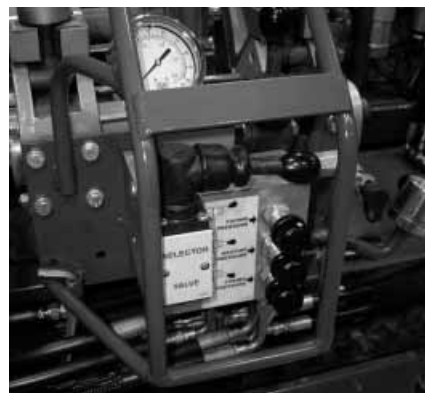

PH01924-11-15-00

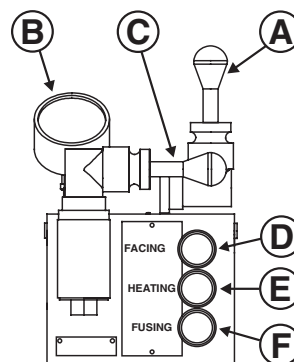

CD00138A-9-12-94


Hydraulic Cylinders

HIGH FORCE hydraulic carriage cylinders are painted green. High force cylinders are used when higher interfacil pressures are required, when handling heavy wall pipe, or when large drag factors need to be overcome.

MEDIUM FORCE cylinders are painted orange and have approximately half the total effective piston area as High Force cylinders. The cylinders move faster and are normally used for medium density pipe and when lower interfacil pressures are used.

LOW FORCE cylinders are painted yellow. These cylinders should be selected when fusing pipe with a very low interfacil pressure (22 psi).

TX01270-2-21-97

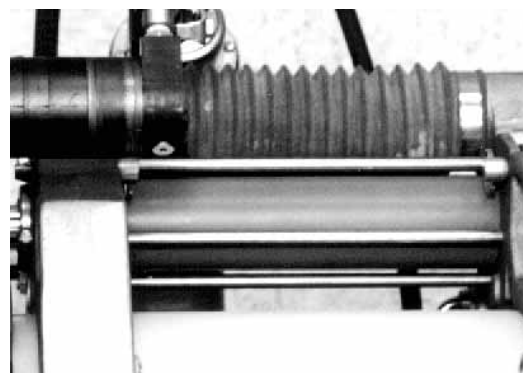

PH00410-9-22-94



Overview



Facer

The facer is a McElroy Rotating Planer-Block design. The block rotates on a ball bearing and is chain driven by a hydraulic motor.

When fusing 4" and 6" diameter pipe on the TracStar no.412 or No.618 move the facer blades to the inboard position.

TX01989-1-10-02



PH01915.11-1500

Insulated Heater Stand

The heater should always be stored in the insulated heater stand or blanket for protection of the operator and to minimize heat loss and risk of mechanical damage.

TX00363-9-15-94



PH02334.07-08-02



Overview



Heater



This Heater Is Not Explosion Proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.

The heater temperature is controlled by a microprocessor. It has a red indicator light on the handle at the bottom of the temperature scale. When the heater is plugged in and preheating the light glows steadily until the set temperature is reached. The light then goes off and on slowly as the heater maintains temperature.

Coated butt fusion heater adapters are available for non-coated heaters.

NOTICE: Non-coated heaters should never be used without butt fusion heater adapters installed.



PH023347-08-02



PH023137-08-02

To prevent a build-up of plastic pipe residue from accumulating on the heater plates (loss of surface temperature and pipe sticking may result), the heater plates should be cleaned with a non-synthetic cloth before and after every fusion joint.



PH023337-08-02



Operation




Read Before Operating

Before operating this machine, please read this manual thoroughly and keep a copy available for future reference.

Return manual to the protective storage box when not in use. This manual is to be considered part of your machine.

TX00401-9-15-94

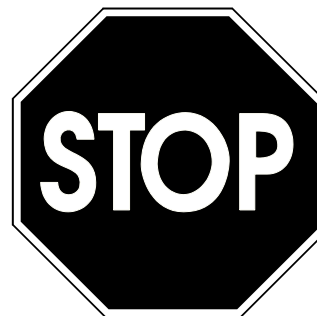

Stop-1228-95

Check Oil Level

Check oil level in the reservoir and verify that oil is visible in the strainer.

Refer to the "Hydraulic Fluids" section of this manual for hydraulic oil recommendations.

If oil is not visible in the reservoir strainer, fill reservoir until oil is visible in the strainer.

Do not overfill reservoir.

Never allow dirt, water, or other foreign matter to enter the tank.

Use only clean oil from an unopened container.

TX02305-7-28-04



PH0271007-29-04

Diesel Engine

Read the operating and maintenance instructions for the engine before operating.

The key ignition has four positions. Preheat, off, run and start.

NOTICE: Set the engine to slow speed before starting. Never use starting fluid.

Open facer valve and unplug the heater. Turn switch to preheat, for five seconds. A horn will sound to signify low oil pressure. Turn the key to the right to start the engine.

Turn the key to OFF to stop the engine.

TX01869-11-8-00



PH01969-11-15-00

Gas Powered Units

Read the operating and maintenance instructions for the engine before operating.

Set the engine speed to choke position. Open facer valve and disconnect heater before starting engine. Turn key to start.

Gradually back off the choke position as engine warms up.

Turn key to stop.

TX01990-1-10-02



PH01926-11-15-00



Operation



Moving Machine Into Position

Make sure all personnel are safely clear of the machine before moving.

Stand behind the machine console.

Move both track control levers forward to go in a straight line. Release the levers to stop. Moving just the right track forward turns the machine to the left. Moving just the left track forward turns the machine to the right. Pull levers back to back up.

TX01491-3-2-98



PH01969-11-15-00

Prepare Heater



Heater Is Not Explosion Proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.

If operating in a hazardous environment, heater should be brought up to temperature in a safe environment, then unplugged before entering the hazardous atmosphere for fusion.

Install butt fusion heater adapters.

NOTICE: The heater should never be used without butt fusion heater adapters installed. Refer to the "Maintenance" section of this manual for installation procedure.

Place heater in insulated heater stand.

Plug heater into the appropriate outlet on machine.

IMPORTANT: Engine must be in high speed to provide electric power to the heater.

Refer to the "Maintenance" section of this manual for instructions how to adjust heater temperature.

Allow heater to warm-up to operating temperature.



PH02334-7-08-02



PH01922-11-15-00

TX01871-11-15-00

Set up Pipe Supports

Set up pipe stands and adjust height so the pipe is in line with the jaws.



PH01900-11-15-00

TX00367-9-15-94



Operation



Install Clamping Inserts

Select and install appropriate clamping inserts for the pipe that is being fused.



PH003049-24-93

TX00368-9-15-94

Check Hydraulic Pressure

The pressure gauge on the manifold block indicates the pressure at the carriage valve. How much pressure depends on the position of the selector valve and the pressure set on the specific pressure reducing valve. With the selector valve up, the facing pressure can be set. It may be necessary to adjust the carriage pressure, while facing, with the top pressure reducing valve to control facing pressure.

Shift the selector valve to the center position, and set the heating pressure (if required). If heating pressure is not required, set the pressure reducing valve at its lowest setting, or the drag pressure, whichever is higher.

With the selector valve in the down position, the fusion pressure can be set.

The heating and fusion pressures can be calculated using the enclosed fusion pressure calculator. Always add drag pressure to the calculated gauge pressure. Drag pressure should be determined using the following procedure:

After facing the pipe, move the carriage so that the pipe ends are approximately 2" apart.

Shift the carriage control valve to the middle (neutral) position.

Select the heating mode, and adjust the middle pressure reducing valve to its lowest pressure by turning the valve counterclockwise.


Shift the carriage control valve to the left.

Gradually increase the pressure by turning the valve clockwise. Increase the pressure until the carriage moves.

Quickly reduce the heating pressure valve counterclockwise until the carriage is just barely moving.

Record this actual drag pressure.

Take the pressure, determined from the calculator, then add the actual measured drag pressure. This will be the actual fusion pressure to set with the bottom pressure reducing valve.

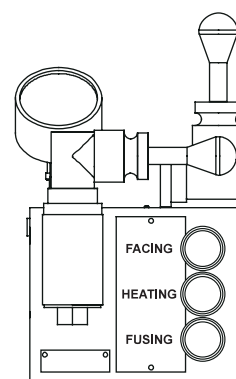

CD001388-9-12-94



PH01761-11-1-99

TX01894-11-15-00



Operation




Loading Pipe Into Machine

Clean the inside and outside of pipe ends that are to be fused.

Open the upper jaws and insert pipe in each pair of jaws with applicable inserts installed. Let the ends of the pipe protrude about 1" past the face of the jaws.

Lower the pipe lifts then clamp the upper jaws.

TX00371-9-15-94

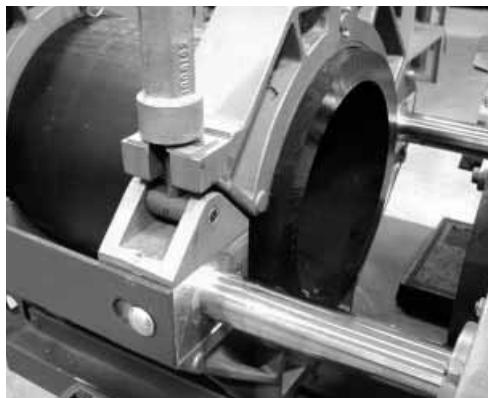


PH01906-11-15-00

Positioning Pipe In Machine

Swing the facer into place. With the carriage control valve lever, move the carriage toward the fixed jaws, while watching the gap at each end of the facer rest buttons. When the pipe is in contact with the facer, this gap indicates the amount of material that will be trimmed from the pipe end. Assure sufficient material will be removed for a complete face off. Tighten the clamp knobs on the outside jaws. Hand tighten the inside clamp knobs.

TX00372-9-15-94

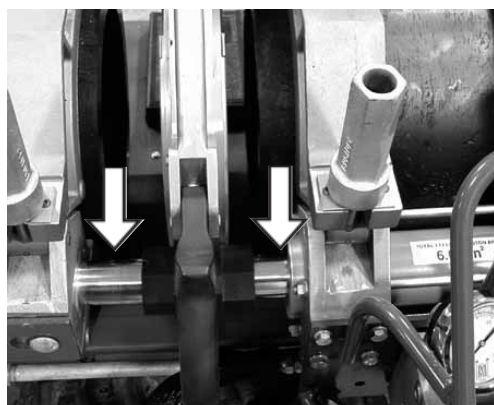

PH01904-11-15-00

Facing the Pipe

Move the carriage to the right.

Open the ball valve on the facer motor.

Assure the selector valve handle is up in the facing position.


Move the carriage control valve to the left.

If the facer stalls, adjust the facing pressure so the facer continues to cut.


IMPORTANT: When drag pressure exceeds 300 psi it is necessary to move the carriage to the left bringing the pipe ends into contact with the facer before opening the facer valve.

Let the carriage bottom out on facer stops. Turn facer off. Move the carriage to the right so the facer can be removed.

TX01872-11-8-00

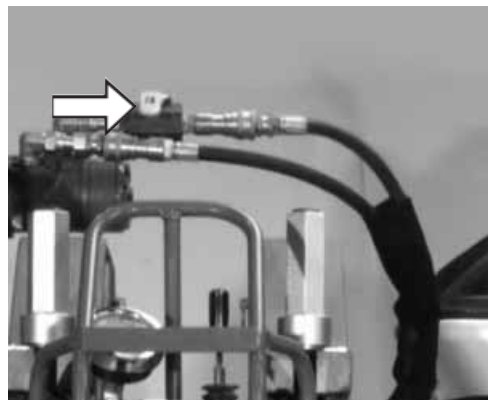

PH00361-9-12-94

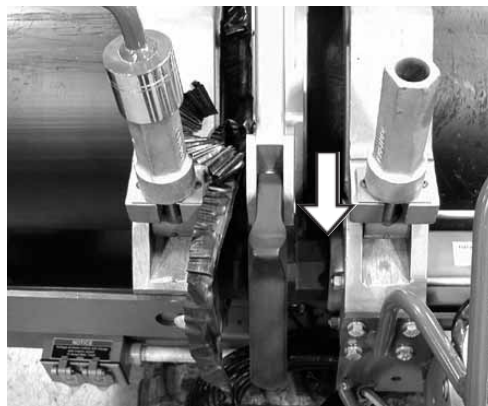

PH01901-11-15-00



Operation



Remove Facer

Swing the facer out to the storage position.

Remove chips from pipe ends.

Do not touch faced pipe ends.

Inspect both pipe ends for complete face off. If the face off is incomplete, return to **Loading Pipe into Machine**.




PH003629-14-94

Move the carriage to the left until ends of pipe butt together.

Check pipe joint for proper alignment.



Do not use finger to check for hi/lo (misalignment). The unit is under pressure, and slippage could result in crushed fingers. Always keep hands clear of the jaw area.

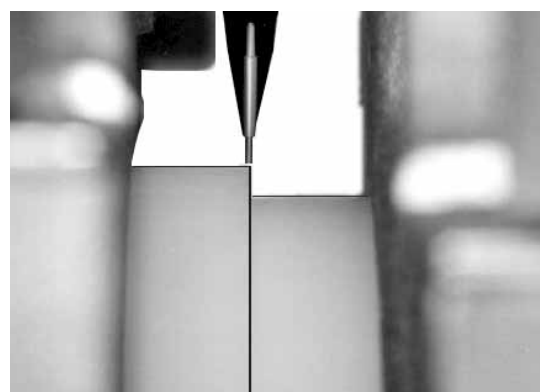


PH003669-12-94

If pipe is not lined up, tighten the high side jaw to bring into alignment.

IMPORTANT: Always tighten the side that is higher, never loosen the low side.

When the pipe is properly aligned tighten outside clamps to insure against slippage.

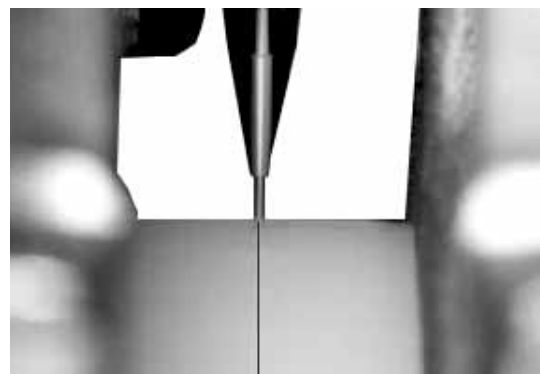

PH003579-12-94

Ensure there is no unacceptable gap between the pipe ends. If there is an unacceptable gap, return to **Loading Pipe into Machine**.

NOTICE: When clamping, do not over-tighten the clamp knobs because machine damage can result. Check to see if there is space between the upper and lower jaws. If the two jaws are touching, do not continue to tighten.

Bring the pipe ends together under fusion pressure to check for slippage. If slippage occurs, return to **Loading Pipe into Machine**.



PH003239-25-93




Operation



Position Carriage for Heater Insertion

Move carriage to the right to open a gap large enough to insert the heater.

TX00374-9-15-94

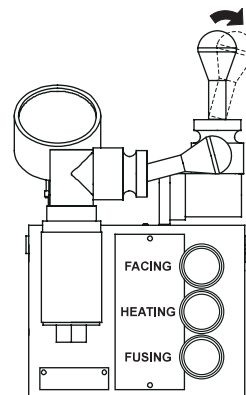

CD00138D-9-12-94

Check Heater Temperature



Incorrect heating temperature can result in questionable fusion joints. Check heater plates periodically with a pyrometer and make necessary adjustments.


Check heater surface temperature.

Refer to the pipe manufacturer's recommendations for proper heater temperature.

IMPORTANT: The dial thermometer on the heater indicates internal temperature which varies from the actual surface temperature.

The dial thermometer can be used as reference once the surface temperature has been verified.

TX00375-11-1-94

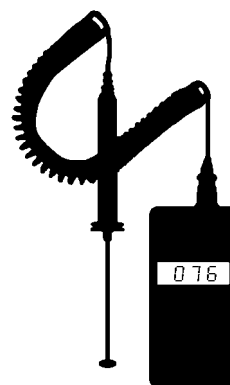

WR00077-4-16-93




PH00420-11-1-94

Select the Fusion Position

Move selector valve handle down to the fusing position.

TX00376-9-15-94

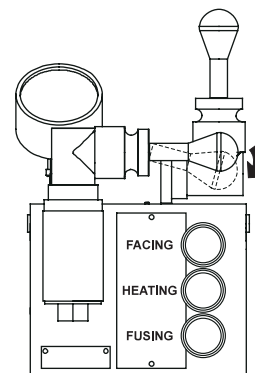

CD00138E-9-12-94



Operation



Inserting Heater

⚠ DANGER

Heater Is Not Explosion Proof. This unit is not explosion proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.

If operating in a hazardous environment, heater should be brought up to temperature in a safe environment, then unplugged before entering the hazardous atmosphere for fusion.

Use a clean non-synthetic cloth to clean the butt fusion heater adapter surfaces.

Verify heater temperature by noting the reading on the dial thermometer.

Insert heater between the pipe ends.



PH023337-08-02




PH010942-20-97


TX00377-9-15-94

Heating the Pipe

- A) Move the carriage to the left, bringing the heater into contact with both pipe ends.
- B) Move selector valve to center position once contact is established.
- C) If heating pressure is not required, allow the pressure to stabilize at the lowest setting and return carriage control valve to neutral position.

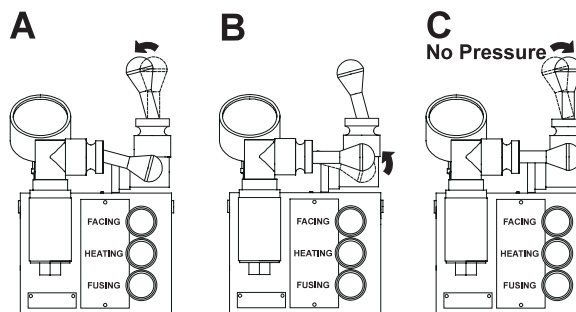

CD00140-9-12-94

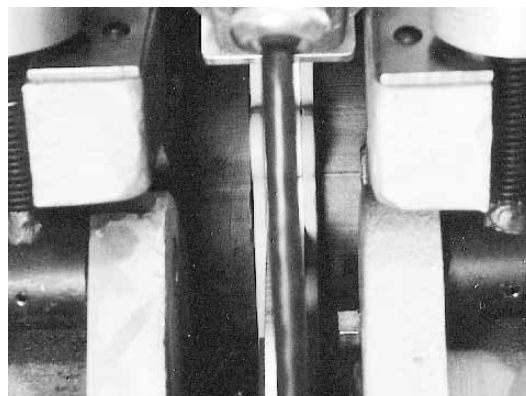

PH00367-9-12-94

TX00874-11-8-00



Operation



Fusing the Pipe




Failure to follow pipe manufacturer's heating time, pressure, and cooling time may result in a bad joint.


After following the pipe manufacturer's suggested heating procedure:

- A) Shift carriage control valve to neutral position.
- B) Shift the selector valve down to fusion position.

A

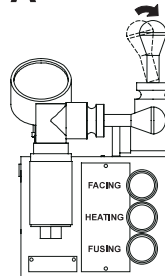

B

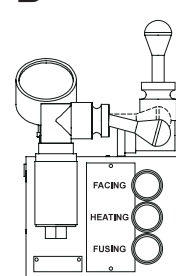


CD00141A-9-12-94

- C) Move the carriage to the right just enough to remove the heater.


Quickly remove the heater.

- D) Move the carriage to the left, bringing the pipe ends together under the pipe manufacturer's recommended pressure.

C

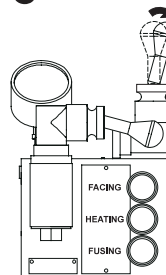


D

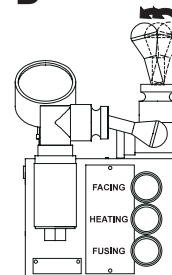

CD00141B-9-12-94

Allow joint to cool under pressure according to pipe manufacturer's recommendation.

TX00379-9-13-94

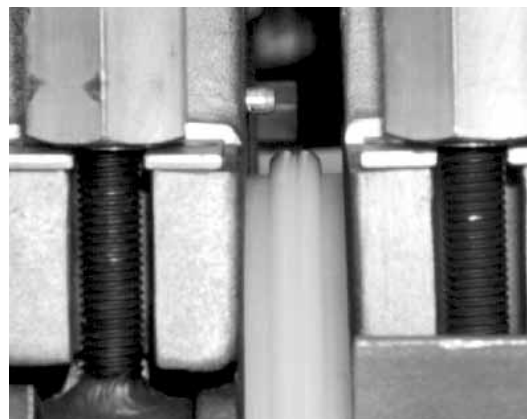

PH00363-9-12-94

Opening Movable Jaws

After the joint has cooled for the pipe manufacturer's recommended time, shift the carriage control valve to the neutral position.

Loosen all clamp knobs, and move carriage to the right far enough to open the jaw nearest the facer.

Open the movable jaws.

TX00380-9-15-94



PH00323-9-25-93



Operation



Opening Fixed Jaws

Open the fixed jaws.

TX00381-9-16-94




PH01903-11-15-00

Raise Pipe

Raise the joined pipe using the pipe lift. Push down on the pipe lift lever then release the latch. Pull the lever up to raise the pipe.

TX00382-9-16-94

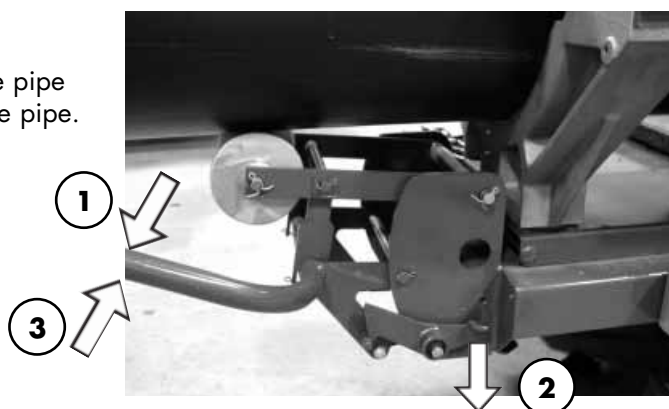

PH01905-11-15-00

Hydraulic Pipe Lifts

The TracStar® No.618 is equipped with two hydraulic pipe lifts controlled by a valve mounted on the outer fixed jaw. When not in use latch the valve in the down position.

TX01991-1-10-02



PH02369-9-19-02




Operation



Position Pipe for Next Joint

Drive the fusion machine to end of pipe, or pull the pipe through the jaws until the end of the pipe is protruding 1" past the jaw face of the fixed jaw.

TX00383-9-15-94

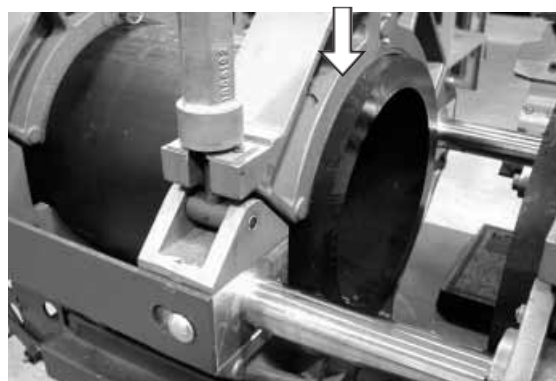


PH01906-11-15-00

Install Next Piece of Pipe

Insert a new piece of pipe in movable jaws and repeat all previous procedures.

TX00384-10-12-95

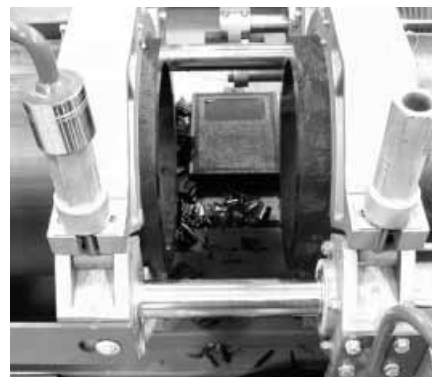

PH00308-9-24-93



Special Operations - In Ditch



Disconnect Hydraulic Hoses

There are two sets of hydraulic hoses. One set connects to the carriage hoses on the machine and to the carriage. The other set connects to the facer hoses on the machine and to the facer.

Disconnect both sets of hoses.

For the TracStar® no.618, disconnect pipe lift valve operator from the outer fixed jaw by pulling the lower knob and rotating the assembly.



PH01911-11-15-00



PH02369-9.19.02

TX011992-1-10-02



PH01908-11-15-00

Remove Carriage Assembly from the Chassis



This equipment is not explosion proof. Operation of this equipment in a hazardous environment without necessary safety precautions will result in explosion and death. See safety section.


The carriage can be easily removed from the machine for fusing pipe on the ground or in the ditch. For especially tight conditions it is also possible to remove the outer fixed jaws and skid. The facer can be removed from the pivot shaft and used manually.

Remove Pin.

Attach lifting sling to the lifting points and the manifold bracket, then lift the carriage assembly.



PH01910-11-15-00

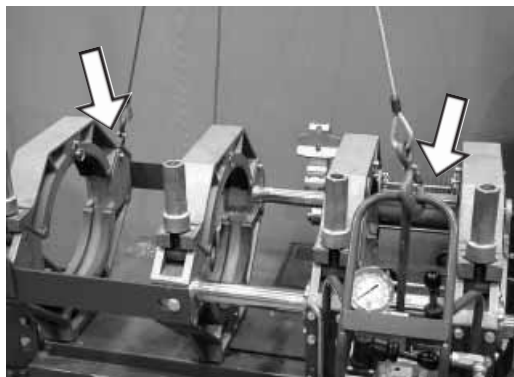

PH01937-11-15-00

TX01876-11-15-00



PH01941-11-15-00



Special Operations - In Ditch



Remove 3-Jaw Assembly from the Carriage

Remove braces from inner fixed jaw.



Remove the four bolts holding carriage assembly to the chassis with the wrench provided.



Attach lifting strap as shown and lift the carriage assembly.





Special Operations - In Ditch



Remove Facer From TracStar No.412 and No.618 Machine

Remove rear guide rod bracket.



PH01933-11-1500

Remove facer locking bolts.



PH01907-11-1500

Lift facer out of the carriage and set on cardboard or wood blocks off of ground.

Attach rear guide rod bracket in the position shown.



PH01936-11-1500

TX01992-1-10-02



Special Operations - In Ditch



Remove Facer From TracStar No.28 Machine

Loosen facer locking bolt.



PH01930-11-15-00

Lift facer out of the carriage and set on cardboard or wood blocks off of ground.

Remove rear guide rod bracket.



PH01981-11-15-00

Attach rear guide rod bracket in the position shown.



PH01980-11-15-00

TX01874-11-8-00



Special Operations - In Ditch




Manual Facer Operation

Lift as shown.



PH019388-11-15-00

Lock onto back guide rod, then latch on front guide rod.

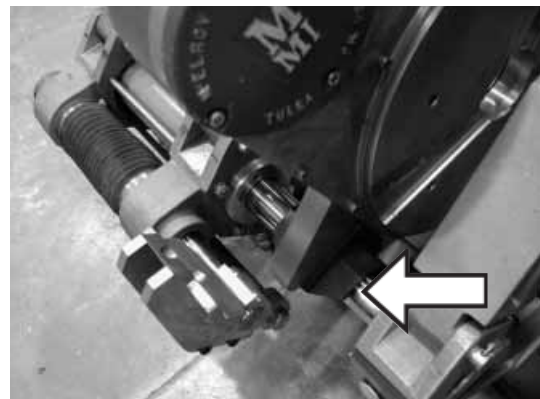

PH01946-11-15-00

TX01887-11-15-00



Special Operations - In Ditch




Removing Top Jaws

If the carriage is going to be hand carried, or if the carriage needs to be hoisted and slid underneath the pipe, the top jaws need to be removed.

Loosen all clamp knobs. Take out the detent pins securing the top jaws and remove the jaws.

TX01479-2-26-98

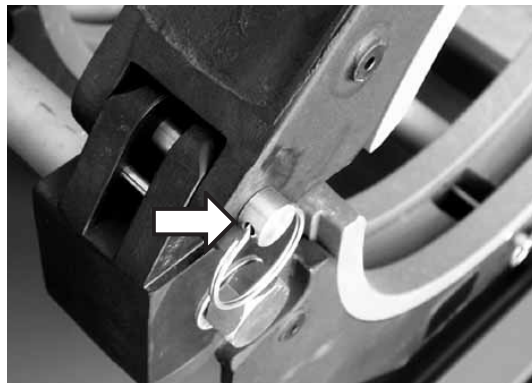

PH013053-12-98

Lower 3-Jaw or 4-Jaw Carriage into Ditch

Use all 4 jaws whenever possible. The three jaw unit should be used only when space is not available for the entire carriage, such as fusing onto a tee, an ell or doing saddle fusion

4-Jaw

Attach lifting sling to the manifold bracket and the near side lift point.


Lift carriage assembly and lower into ditch.

3-Jaw


Attach lifting sling to the manifold bracket.

Lift carriage assembly and lower into ditch.

TX01864-9-29-00

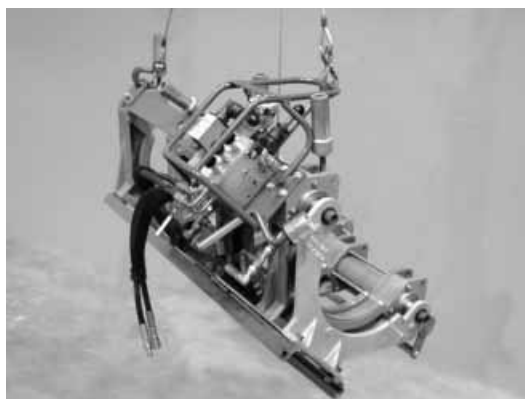

PH01983-11-15-00

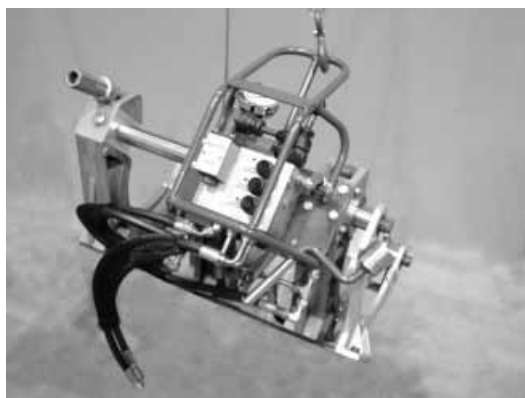

PH01984-11-15-00




Special Operations - In Ditch




Clamp Carriage Assembly to Pipe

Position carriage assembly on side of the pipe. Lift pipe and slide carriage assembly under pipe.

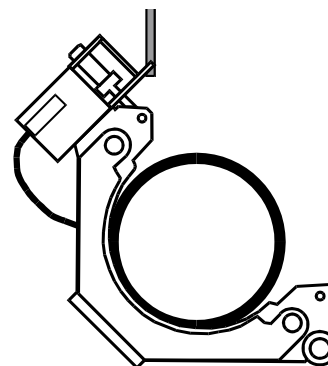


CD00193b-2:19-96

Rotate carriage assembly around to a normal upright position.

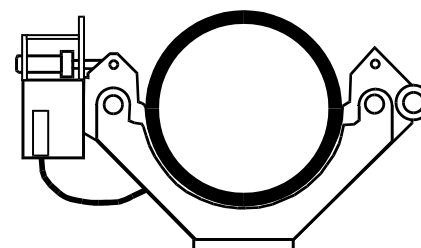

CD00194b-2:19-96

Attach the top jaws and loosely clamp around pipe.

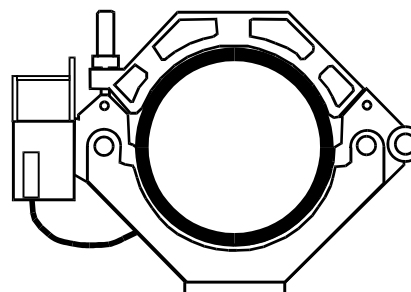

CD00195a-2:19-96

TX00879-2:19-96



Special Operations - In Ditch



Attach Hydraulic Hoses

There are two sets of hydraulic extension hoses. One set connects to the carriage hoses on the machine and to the carriage. The other set connects to the facer hoses on the machine and to the facer.

Connect all hoses.

TX01485-2-26-98




PH01908-11-15-00

Make Fusion Joint

Refer to the "Butt Fusion Procedure" for operating instructions.
After facing operation, remove the facer from ditch.

TX00450-9-16-94

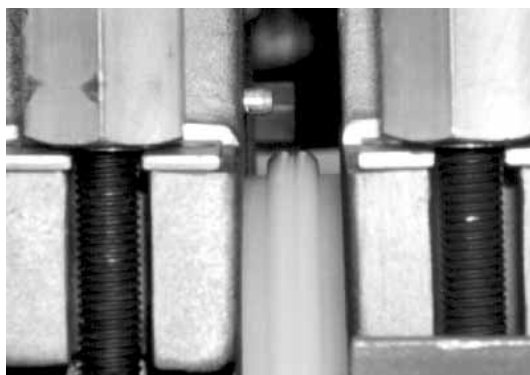

PH00363-9-12-94

Remove Carriage Assembly from Ditch

Loosen clamp knobs and remove top jaws.


Rotate carriage assembly from under the pipe.

IMPORTANT: Always rotate unit with valve system facing up to protect against damage.

Attach sling to lifting point(s).

Lift carriage assembly from ditch.

TX00451-9-16-94

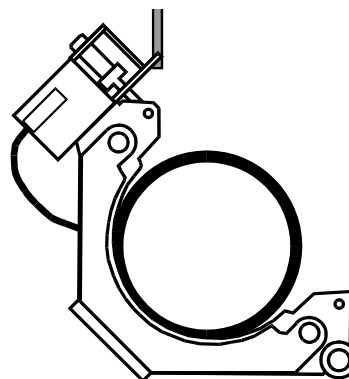

CD00193b-9-29-00

Reassemble Fusion Machine

Install carriage assembly to the chassis and connect carriage hoses.

Lift facer into position and bolt to facer mount. Do not tighten. Pivot facer down and bring jaws inward against the facer to establish facer position. Open jaws away from facer and pivot facer out. Tighten the facer mounting bolts.

Connect facer hoses.

Install pipe lift operator on the TracStar® no.618

Replace top jaws.

TX01993-1-10-02



PH01907-11-15-00



Special Operations - Saddle Fusion Procedure



Saddle Fusion Procedure for TracStar No.28CU

The combination unit is capable of saddle fusing up to an 8" (200 mm) branch on any size main.

TX00454-9-22-94



PH00406-9-21-94

Install Heater Adapters

⚠ CAUTION

Heater is Not Explosion Proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.

If operating in a hazardous environment, heater should be brought up to temperature in a safe environment, then unplugged before entering the hazardous atmosphere for fusion.

Select appropriate heater and sidewall fusion heater adapters. Clean heater surfaces and adapter surfaces. Attach the adapters to the heater.

Place heater in insulated heater blanket.

Plug heater into the vehicle.

IMPORTANT: Engine must be in high speed to provide electric power to the heater.

TX01888-11-15-00



PH00416-11-1-94



PH00418-11-1-94

Assure Saddle Will Fit

For branch saddles, a nipple long enough to extend through both movable jaws should be fused to the fitting using standard butt fusion procedures.



PH00423-11-1-94

TX00456-9-15-94



Special Operations - Saddle Fusion Procedure



Install Clamping Inserts

Select and install appropriate clamping inserts in the movable jaw(s).


TX00457-9-16-94



Remove Carriage Assembly from Vehicle

Use lifting sling and detach carriage from vehicle.
Refer to pg. 4-1


TX01880-11-10-00

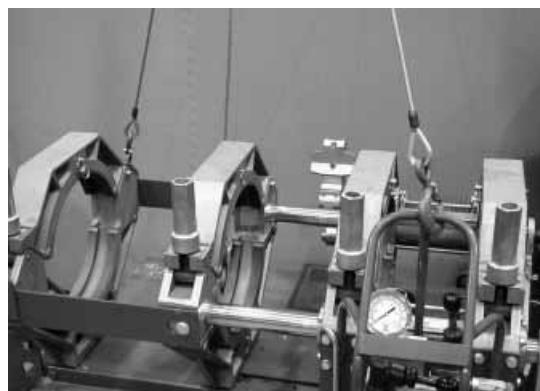

Attach Carriage Assembly to Main

Place the machine on the main.
Place a line bolster on main opposite the carriage assembly if required.
Position the tailstock chains around the main and lock into the chain hooks.
Tighten the machine onto the main using the tailstock clamp knobs.

TX00458-9-16-94

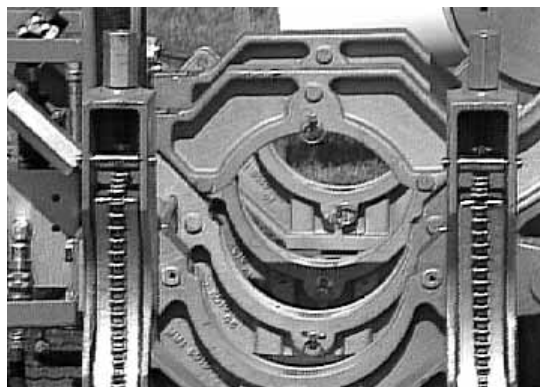


Set Hydraulic Pressure

Check hydraulic pressure. Shift the selector valve to the center position to set the pressure for heating (if heating pressure differs from fusion pressure). With the selector valve in the down position, the fusion pressure can be set.

Consult the pipe manufacturer for proper pressures.

TX00459-9-16-94

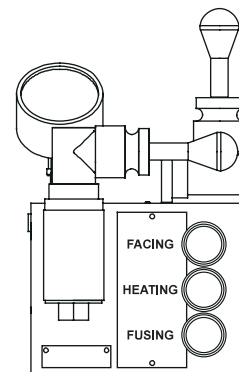



Special Operations - Saddle Fusion Procedure



Clean Surfaces

Use 50 or 60 grit utility cloth to clean and rough the main to expose fresh material.

Rough the base of the fitting unless the manufacturer specifies otherwise.

Surface must be free of water and oil.

TX01879-11-10-00




PH00400-9-21-94

Clamp Fitting

Position the fitting, and bolster if required, loosely in the movable jaw(s). Move the carriage to the right to properly position the fitting on the main. Tighten the clamp knobs.

Be sure to allow enough travel for the melt pattern and fusion to occur (3/4" min.).

TX00461-9-15-94

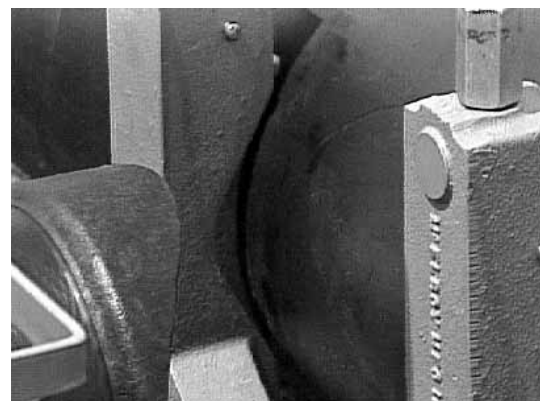


PH00399-9-21-94

Test for Slippage

Bring the fitting against the main under full fusion pressure to insure that no slippage or movement of the main or fitting occurs.

TX00462-9-14-94

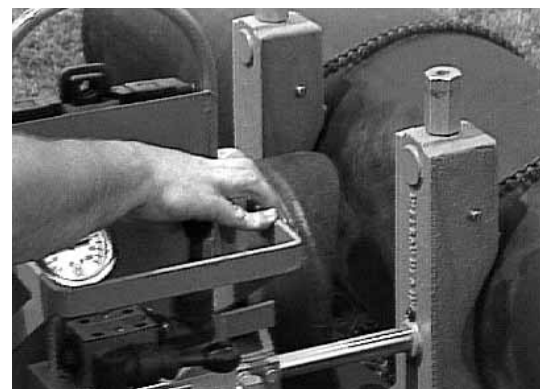

PH00390-9-21-94



Special Operations - Saddle Fusion Procedure



Prepare Heater



Heater is Not Explosion Proof. Operation of heater in a hazardous environment without necessary safety precautions will result in explosion and death.


If operating in a hazardous environment, heater should be brought up to temperature in a safe environment, then unplugged before entering the hazardous atmosphere for fusion.

Use a clean non-synthetic cloth to clean the saddle fusion heater adapter surfaces.

Verify heater temperature by noting the reading on the dial thermometer.

Check the heater temperature and install heater between the fitting and main. Assure proper line-up.

TX00463-9-16-94

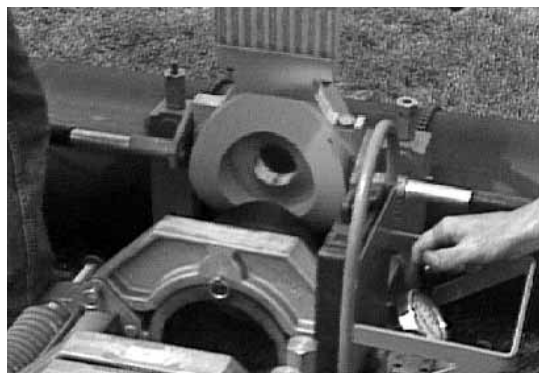

PH00389-9-21-94




PH00417-11-1-94

Heat Pipe and Fitting

Move selector valve to the center position, if pressure during the heat cycle differs from fusion pressure. Move the carriage to the right to bring the fitting in contact with the heater and the heater in contact with the main. The carriage control valve lever must be positioned in the right hand position to maintain pressure.

Establish proper melt pattern as specified by the material supplier.

TX00464-9-14-94

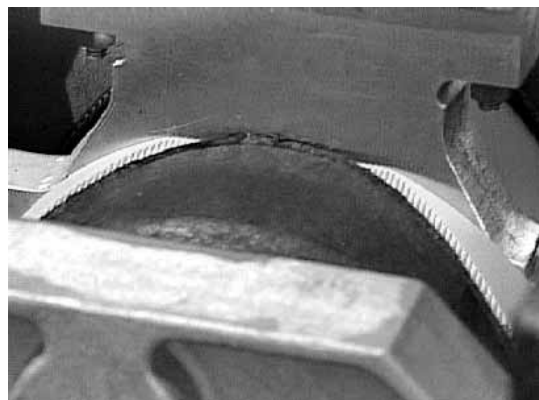

PH00402-9-21-94

Remove Heater

Shift the carriage control valve to neutral and then the selector valve down to the fusion position. Move the carriage to the left just enough to remove the heater.

TX00465-9-14-94



PH00404-9-21-94



Fuse Fitting to Pipe

Remove the heater with a snap action and quickly inspect the melt pattern. Quickly move the carriage to the right bringing the fitting and main together under the pipe manufacturer's recommended pressure.



PH00403.9.2.1.94

TX00466.9.14.94

Allow Joint to Cool

Allow the joint to cool under pressure as specified by the pipe manufacturer. To maintain fusion pressure during cooling, the carriage control valve must be positioned in the right hand direction.



PH00405.9.2.1.94

TX00467.9.14.94



Special Operations - Lifting Fusion Machine




Heavy Overhead Load

⚠ DANGER

Fusion machine and plastic pipe are heavy. If loaded or lifted improperly, they could crush or kill. Handle load carefully with proper overhead rigging and equipment of adequate load rating.

TX00062-3-8-93

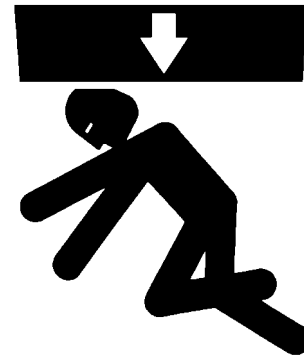

WR00014-3-8-93

Crush Points

⚠ WARNING

Crush points exist on this machine. Keep hands and body parts away from the machine. Be aware of yourself and others when moving equipment.

TX01895-11-15-00



WR00012-12-4-92

Required Equipment

- ☐ Proper overhead rigging and equipment of adequate load rating to lift the fusion machine.
- ☐ Lifting Sling - (supplied with machine)

Notice: Check all equipment to confirm that it is in good working order.



PH01955-11-15-00

TX01881-11-10-00



Special Operations - Lifting Fusion Machine




Attach Slings

Attach the sling to the pick-up points. The cables are color coded to the chassis. Connect the yellow cables to the yellow lift points, etc. For machines that are not color coded, attach the longest leg cable at position A and the shortest leg cable at position B.

When lifting the TracStar® No.618, pivot the facer out before attaching the lifting sling. The cable attached at position A will run through the inner fixed jaw. Small pipe diameter inserts in the upper fixed jaw may need to be removed to prevent the cable from deflecting.

TX02059-9-19-02

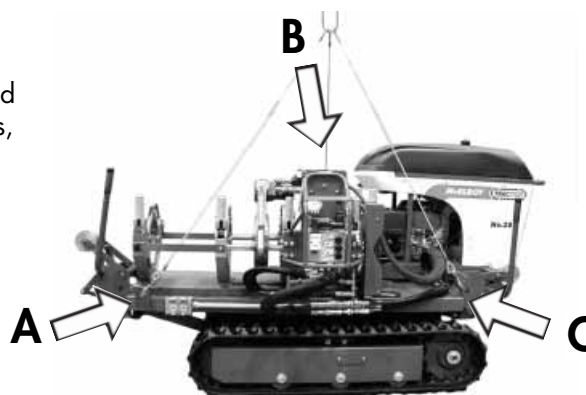

PH01937-11-15-00

Lifting Safety

Follow all applicable federal, state, local, and industry specific regulations when lifting unit.

Never carry loads over people.

TX00410-10-12-93



SAFE1ST-12-14-92



Maintenance




Preventative Maintenance

To insure optimum performance, the machine must be kept clean and well maintained.

With reasonable care, this machine will give years of service. Therefore, it is important that a regular schedule of preventive maintenance be kept.

Store machine inside, out of the weather, whenever possible.

TX00428-8-10-95

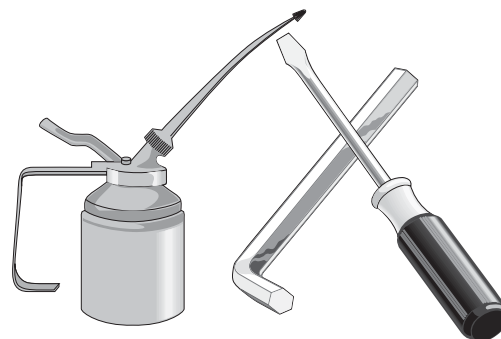

CD00142-11-2-94

Washing the Machine

The machine should be cleaned, as needed with a soap and water wash.

TX00429-9-15-94



CD00178-9-29-00

Check Hydraulic Fluid

The hydraulic fluid level should be checked daily.

If hydraulic oil is not visible in the reservoir strainer.

Refer to the "Hydraulic Fluids" section of this manual for hydraulic oil recommendations.

If oil is not visible in the reservoir strainer, fill reservoir until oil is visible in the strainer. Do not overfill reservoir.

Never allow dirt, water or other foreign matter to enter the tank.

Use only clean oil from an unopened container.

TX02307-7-28-04



PH02710-07-29-04


Change Hydraulic Fluid and Filter

The hydraulic fluid and filter should be replaced after every 400 hours of operation.

Fluid should also be changed as extreme weather conditions dictate.

Refer to the "Hydraulic Fluids" section of this manual for hydraulic oil recommendations.

TX00431-9-15-94

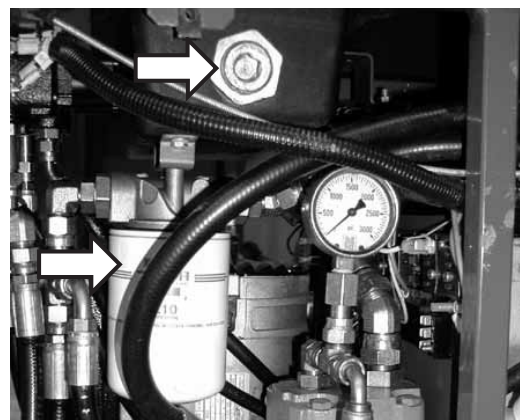


PH01916-11-15-00




Install/Remove Covers

Hook top of cowl on three clips. Align the thumbscrew in the socket and tighten.

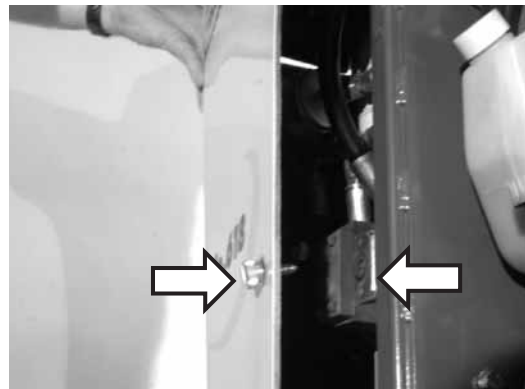

PH01976-11-1500

Align the rear latches and fasten the latch, making sure it locks. The cowl should be outside the dash panel

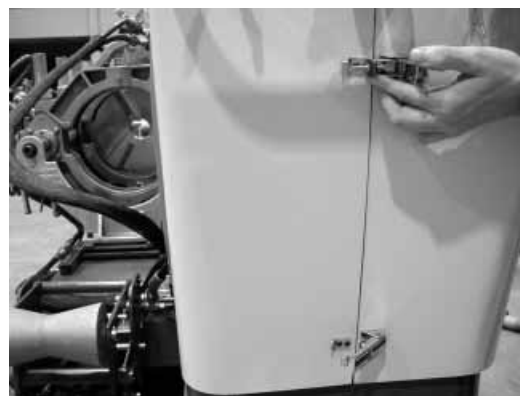

PH01974-11-1500

Align and fasten the front latch the same way.



PH01975-11-1500

Reverse the procedure to remove the cowls.



PH02245-1-10-02



Maintenance



Engine Belt Tension Adjustment

Check the engine belt tension every 100 hours of operation. A force of 7lb. should deflect the belt 1/8 inch. If oil has gotten on the belt it will need to be replaced.

TX01996-1-10-02




PH01918-11-15-00

Tensioning the Belt

The tensioner is located beside the rear pipe lift. Loosen the jam nut and tighten the belt as noted above. Lock the jam nut after adjusting

NOTICE: Overtightening will cause premature failure of engine and alternator bearings. Under tightening will cause chirping and belt slippage.

TX01997-1-10-02

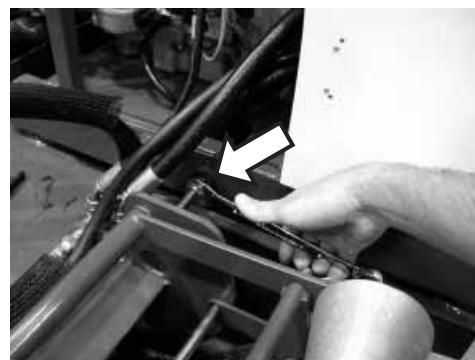

PH01957-11-15-00

Adjusting System Pressure


Remove the right side engine cover to gain access to the hydraulic pump.

Start the engine and select high speed.

The system pressure should be at 1800 psi on TracStar® No.28 & No.412 and 2000 psi on the TracStar® No.618 units.

To adjust the pressure, loosen the jam nut and turn the compensator to the right to increase the pressure, or to the left to decrease pressure. Retighten the jam nut.

TX01998-1-10-02

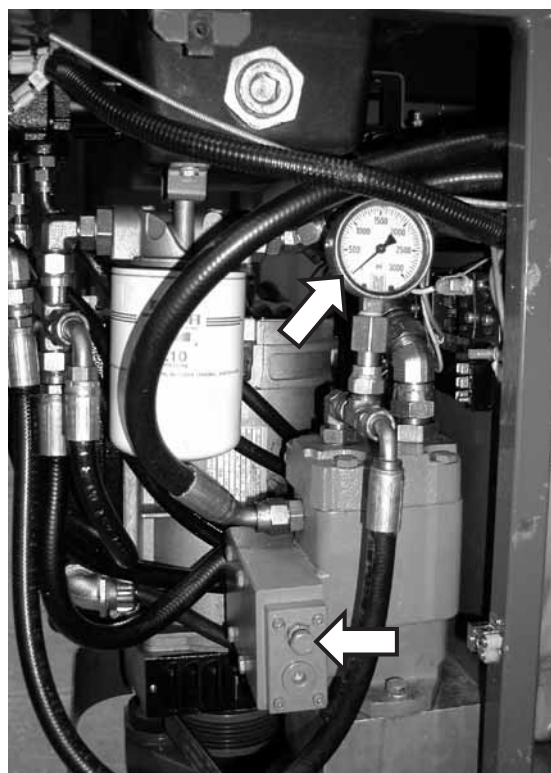

PH01917-11-15-00



Maintenance



Engine Oil System - Diesel

Change engine oil and filter after the first 50 hours of operation. After the first oil change, change the oil and filter every 200 hours of operation. Read the engine maintenance instructions.


Use appropriate single weight oil for the ambient temperature.

The oil filter is located behind the engine access panel.

The oil drain plug is located on the bottom of the oil pan.

The oil filler cap and dip stick are located on top of the engine.

TX01884-11-10-00

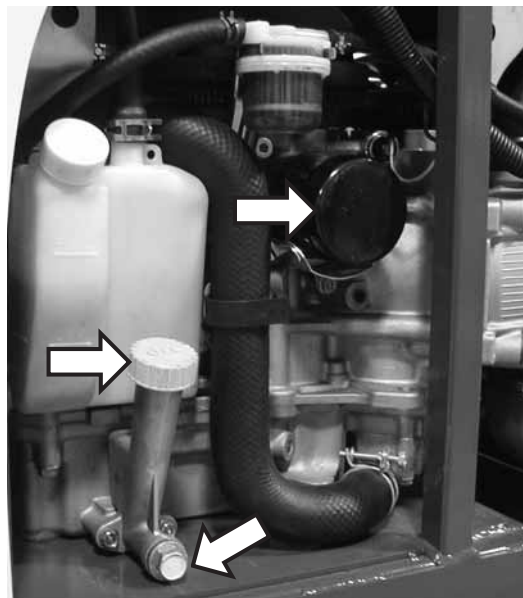

Engine Oil System - Gasoline


Change engine oil after the first 20 hours of operation. After the first oil change, change the oil and filter every 100 hours of operation. Read the engine maintenance instructions.

Use appropriate single weight oil for the ambient temperature.

The oil drain plug is located on the bottom of the oil pan.

The oil filler cap and dip stick are located on top of the engine.

TX01900-11-15-00

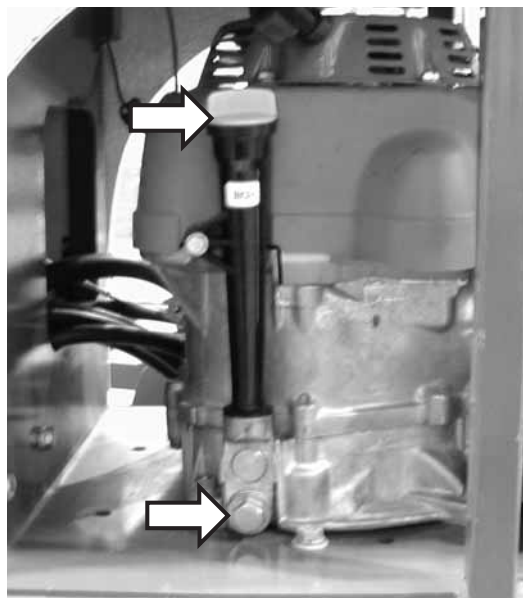



Maintenance



Check Gauge Calibration

Gauge calibration should be checked daily.
The gauge should read zero when the unit is not running.
Damaged gauges should be replaced.

TX00432-9-13-94



PH01972-11-15-00

Clean Jaws and Inserts

To prevent slippage and insure proper alignment, the jaws and inserts must be clean.
Clean the jaws and inserts of any dirt or residual material using a stiff-bristled brush.

TX00433-9-15-94




PH00304-9-24-93

Clean Thrust Bearings

The thrust bearings located in the clamp knobs must turn freely.
Wash the clamp knob bearing assembly with a solvent, and then lubricate with 30W or lighter oil.

TX00434-9-13-94

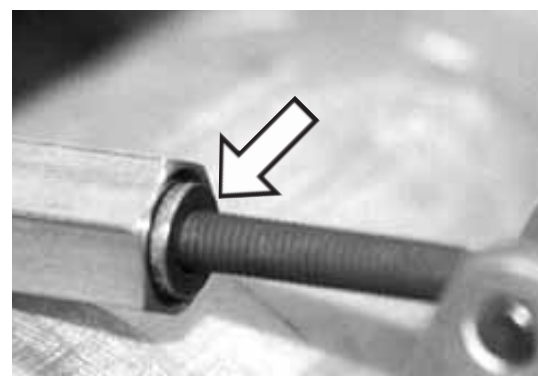


PH00377-9-14-94

Clean Eyebolt Threads

Keep the clamp knob eyebolt threads brushed clean.

TX00435-9-13-94

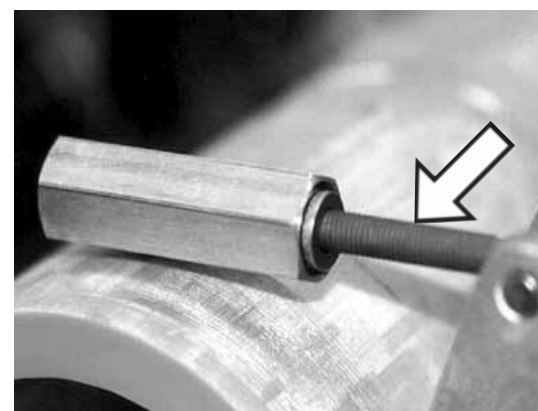

PH00377-9-14-94




Maintenance



Clean the Clamping Chains

On the combination unit clean the side fusion chains as needed. Clean using a stiff-bristled brush and oil generously. Wipe away any excess oil.

TX00436-9-13-94

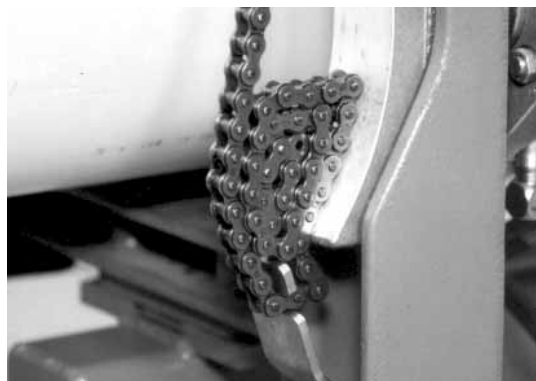

PH00378-9-14-94

Fasteners Must Be Tight

Check all nuts, bolts, and snap rings to make certain they are secure and in place.

TX00437-9-13-94



PH00433-11-1-94

Facer Blades

Blades bolt directly to the blade holder and should be inspected for damage and sharpness.

Dull or chipped blades must be replaced.

TX00439-9-13-94




PH01912-11-15-00

Check/Add Antifreeze

Add antifreeze in a 50/50 mix with water as needed on diesel units.

Replace antifreeze mixture once each year or as recommended in engine manual.

TX01897-11-15-00

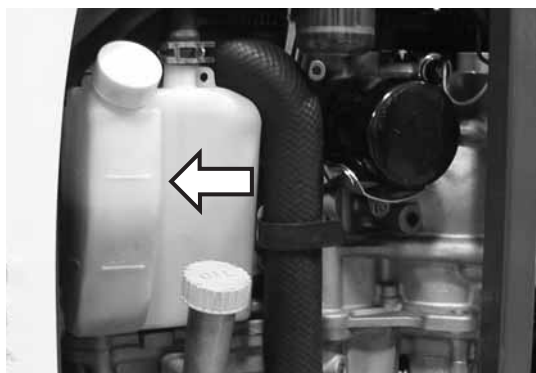

PH01903-11-15-00



Clean Heater Surfaces

The heater faces must be kept clean and free of any plastic build up or contamination.

Before and after each fusion joint the heater surfaces must be wiped with a clean, non-synthetic cloth.

NOTICE: Do not use an abrasive pad or steel wool. Use a non-synthetic cloth that won't damage surfaces.

TX00440-9-13-94



PH02333-7-08-02

Bleeding Air From Hydraulic System

The two carriage cylinders have air bleed screws and must be bled if the system ever runs low on oil or leaks air on inlet side of pump. Air in the system is indicated when carriage movement becomes jerky and erratic. To bleed the system, proceed as follows:

Remove upper jaws & clamping eye bolts from the two movable clamp jaws to expose the bleed plugs recessed in top of the lower jaws.

Tilt machine so the fixed jaw end is higher than the opposite end.

Shift the directional control and move the carriage to the fixed jaw end. Adjust the pressure to approximately 50-100 psi before proceeding.

Loosen the bleed plug on one cylinder next to the fixed jaw.


Hold pressure on the cylinder until no air is indicated and quickly tighten the plug.

Repeat this operation on the opposite cylinder.


Tilt the machine so the opposite end is higher than the fixed jaw end. Move the carriage to the end opposite the fixed jaw and repeat the above procedure on the this end of the cylinders.




PH01991-11-15-00

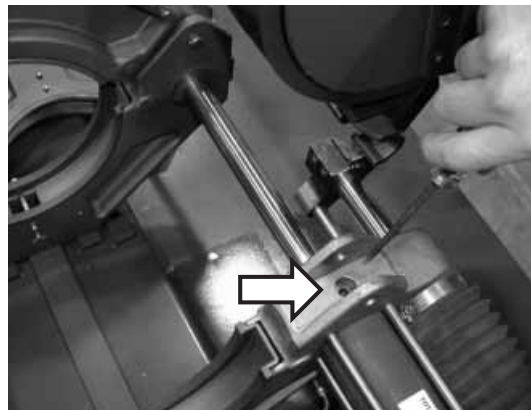

PH01992-11-15-00

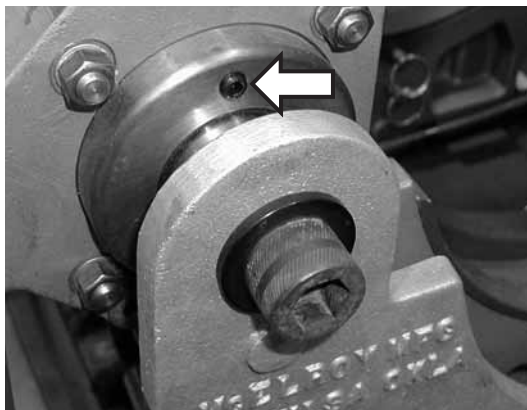

PH01993-11-15-00

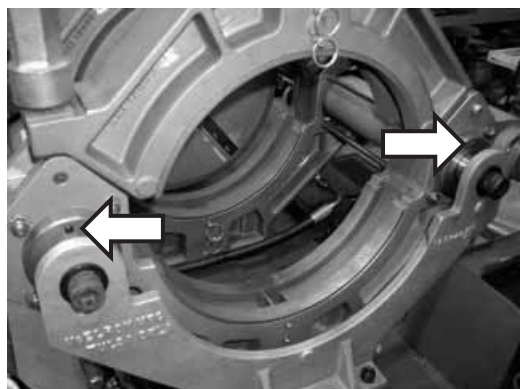

PH01994-11-15-00

TX00427-9-15-94



Maintenance



Installing Butt Fusion Heater Adapters

The heater body of this assembly is not coated. Coated butt fusion heater plates are available for all butt fusion applications.

Butt fusion heater adapters are installed with Stainless Steel Cap Screws.

Care should be taken to assure that the butt fusion heater adapters are seated on the heater body, and that there is no foreign matter trapped between these surfaces.

IMPORTANT: Do not over tighten the bolts.

The surface of the butt fusion heater adapters are coated with an antistick coating.



PH02333-7-08-02

TX01899-11-15-00

Adjusting Heater Temperature

Turn knob to desired temperature. Measure the heater surface temperature with a pyrometer. Any variance must be corrected to the pyrometer reading.

Loosen setscrew in the knob. Turn knob to point to the same temperature as the pyrometer. Tighten setscrew in the knob.

Turn knob to desired temperature. Allow heater to stabilize at the new temperature (5 to 10 minutes) after adjusting.

The thermometer on the heater body indicates internal temperature and should be used as a reference only.

TX02034-7-08-02



PH02313-7-08-02


Heater Indicator Light

The heater has a red indicator light on the handle at the bottom of the temperature scale. When the heater is plugged in and preheating the light glows steadily until the set temperature is reached. The light then goes off and on slowly as the heater maintains temperature.

If the heater is not operating properly, the control will attempt to turn the heater off and the indicator light will flash rapidly. If this occurs, disconnect the power and take it to a McElroy Authorized Service Center for repair.



PH02314-7-08-02

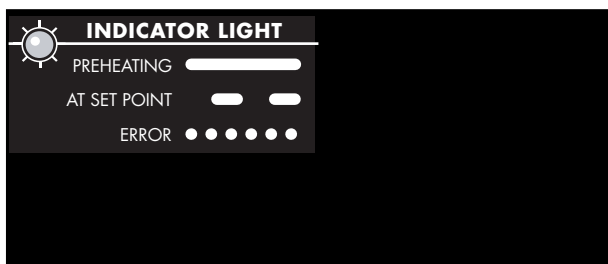

PH00482-8-16-95

TX02035-7-08-02



Maintenance



Engine Maintenance

Refer to the operation and maintenance manual for the engine.



PH01960-1 1-15-00

TX01500-3-5-98


Checking Track Tension

Park the machine on a flat solid surface.

Use the lifting sling to raise machine off the ground.

Place adequate supports under the the bottom frame after lifting.

Measure the deflection between the bottom center roller and the inside surface of the rubber track. Track tension is normal when this distance is about 1/2". If the deflection is more or less than this, the tension needs to be adjusted.

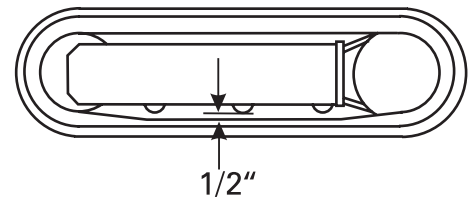

CD00463-2-25-98

TX01885-11-10-00



Adjusting Track Tension

⚠ WARNING


The grease in the hydraulics of the track is pressurized. If the grease valve is loosened too much, grease can be expelled at high pressure and cause serious injury. Never loosen grease valve more than one turn. Injury could also result if the grease nipple is loosened. Never loosen the grease nipple.

Remove screws and cover to access the adjustment system.


To loosen the track, turn hex shaped valve ① counterclockwise no more than 1 turn. If grease does not start to drain out, then slowly rotate the track. When correct track tension is obtained, turn valve clockwise and tighten it. Clean off any expelled grease.

To tighten the track, connect a grease gun to the nipple ② and add grease to the system. When the track stretches to the correct tension, stop adding grease. Clean off any excess grease.

Replace access cover.

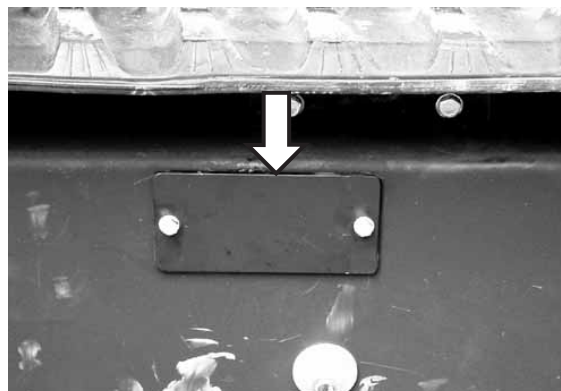

PH01283-2-25-98

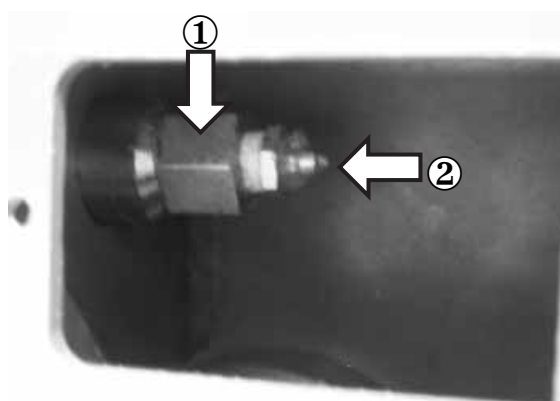

PH01979-11-15-00

TX01898-11-15-00

Setting Engine Speed

With the engine running at max speed plug the heater in. Put a volt meter in the unused receptacle. Make sure the throttle is in the detented position.

Adjust throttle cable sheath until voltage is correct.

The TracStar No.412 and No.618 should read $120V \pm 2$.

The TracStar No.28 should read $240V \pm 4$.



PH01987-11-15-00



PH01986-11-15-00

TX01906-11-15-00



Maintenance Checklist



Fusion Machine Checklist

Items to Check	Satisfactory	Needs Repair	Repair Comments
UNIT			
Machine is clean			
All pins and snaprings are in place			
All nuts and bolts are tight			
All identification placards and handles are in place			
All clamp knobs are lubricated and turn freely			
Wiring, battery cables, & all electrical terminals			
Cords and plugs are in good condition			
All hardware is on the basic machine			
Hydraulic oil level is correct			
No oil or water leaks (engine and hydraulic system)			
Hydraulic gauge reads correctly			
Rubber tracks in good condition			
Fuel tank full			
Engine crankcase is filled to correct level			
Cooling system level is correct			
Hydraulic hoses are in good condition			
Engine starts and runs properly			
Jaws are properly aligned			
Facer pivot operates properly			
Facer operates smoothly			
Face-off is square			
Inserts fit and pin properly			
Voltage to heater is correct			
Carriage and Selector Valves operate smoothly			
Pressure Reducing Valves operate in their range			
Heater Cord and plug are in good condition			
Heater surface is clean and in good condition			
Thermometer is in good working order			
Surface temperature checked with pyrometer			
Throttle control works properly			
Low Oil /alarm works (diesel only)			
Primary pump pressure (1800 psi)			
Hydraulic carriage works smoothly			
Check receptacles for damage			




Determining Fusion Pressure



Variable Definitions

- O.D. = Outside Diameter
 t = Wall Thickness
 Π = 3.1416
 SDR = Standard Dimensional Ratio
 IFP = Manufacturer's Recommended Interfacial Pressure
 TEPA = Total Effective Piston Area

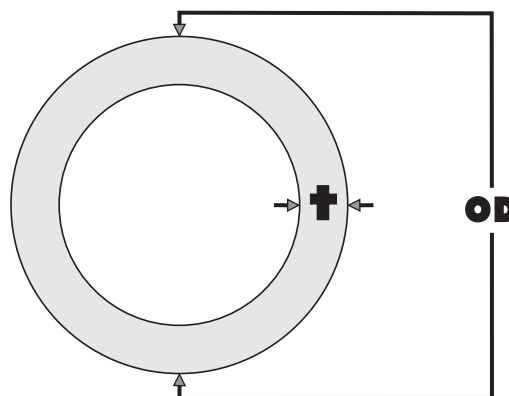


Formulas

$$t = \frac{\text{O.D.}}{\text{SDR}}$$

$$\text{AREA} = (\text{O.D.} - t) \times t \times \Pi$$

$$\text{FORCE} = \text{AREA} \times \text{IFP}$$

$$\text{GAUGE PRESSURE} = \frac{(\text{O.D.} - t) \times t \times \Pi \times \text{IFP}}{\text{TEPA}} + 30 \text{ P.S.I. DRAG}$$

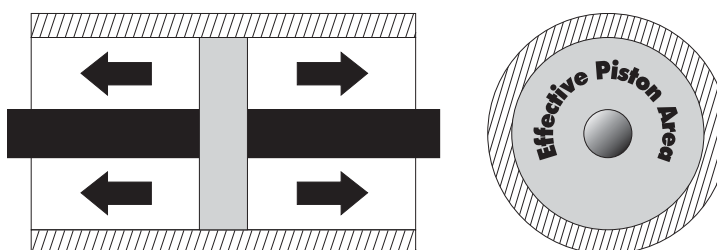

Example

Pipe Size = 8" IPS

O.D. of Pipe = 8.625

SDR of Pipe = 11

Recommended Interfacial Pressure = 75 PSI

Using a Model 28 Fusion Unit

$$t = \frac{\text{O.D.}}{\text{SDR}} = \frac{8.625}{11} = 0.784$$

TEPA = 4.710 (From Table)

$$\text{GAUGE PRESSURE} = \frac{(\text{O.D.} - t) \times t \times \Pi \times \text{IFP}}{\text{TEPA}} + 30 \text{ P.S.I. DRAG}$$

$$\text{GAUGE PRESSURE} = \frac{(8.625 - .784) \times .784 \times 3.1416 \times 75}{4.710} + 30 \text{ P.S.I. DRAG} = 338 \text{ PSI}$$

Total Effective Piston Areas

Fusion Model	High Force (Standard)	Medium Force (High Velocity)	Low Force (Extra High Velocity)
28	4.71	-	1.67
412	11.78	6.01	3.14
618	11.78	6.01	3.14
824	29.44	15.32	9.45
1236	29.44	15.32	9.45
1648	31.42	14.14	-
2065	31.42	-	-



Hydraulic Fluids



Hydraulic Fluids

The use of proper hydraulic oil is mandatory to achieve maximum performance and machine life. Use a clean, high quality, anti-wear hydraulic oil with a viscosity index (VI) of 135 minimum. It should have a maximum viscosity of 500 cSt (2000 SSU) at startup (ambient temperature) and a minimum viscosity of 13 cSt (65 SSU) at the maximum oil temperature (generally 80°F above ambient). Using hydraulic oils that do not meet these criteria may cause poor operation and/or damage to the hydraulic components.

The following table specifies the oil temperature at various viscosities. Temperature rise of the hydraulic oil can vary from 30° F to about 80° F over the ambient temperature depending on the pressure setting, age of the pump, wind, etc. Exxon Univis N46 hydraulic oil is installed at our factory. The advantage of this oil is a wider temperature range, however, this oil should not be used for continuous operation below 20° F. For use in extremely cold ambient temperatures, we suggest Mobil DTE 11M, which can be used to -16° F. This oil should not be used for continuous operation above 100° F (oil temperature).

TX02244-2-2-04

Hydraulic Fluids Characteristics																
Manufacturer	Fluid Name	SSU 100F	SSU 210F	V.I.	-20F	-10F	0F	10F	30F	50F	70F	90F	110F	130F	150F	Range °F
Mobil	DTE 11M	87	40	145	*****	*****	*****	*****	*****	*****	*****	*****				-27-87
	DTE 13M	165	48	140				*****	*****	*****	*****	*****	*****	*****		5-130
	DTE 15M	225	53	140				*****	*****	*****	*****	*****	*****	*****	*****	5-140
Exxon	Univis N-32	177	49	164				*****	*****	*****	*****	*****	*****	*****		5-140
	Univis N-46	233	55	163					*****	*****	*****	*****	*****	*****		25-142
	Univis N-68	376	68	160						*****	*****	*****	*****	*****	*****	34-155

NOTE: This chart is based on pump manufacturer recommendations of 65 to 2000 SSU limits.

NOTE: Temperatures shown are fluid temperatures. – NOT ambient temperatures.





Specifications





TracStar® No.28 Fusion Machine Specifications:

- Engine: 11HP, OHV, Air Cooled
- Starting System: Electric and Recoil
- Fuel Type: Gasoline
- Fuel Tank Capacity: 5 Gals.
- Operational Tank Capacity: 8 Hrs.
- System Pressure: 1750 PSI
- Hydraulic Reservoir Capacity: 8 Gals
- Vehicle Speed: 2.5 MPH
- AC Output: 120V & 240 V, 60Hz, 15 Amp
- Entire Machine Weight: 1320 lbs (598.7kg)
- 3-jaw Carriage Weight: 185 lbs (83.9kg)
- 4-jaw Carriage Weight: 230 lbs (104.3kg)
- Facer Weight: 39 lbs (17.7kg)
- Heater Weight: 17 lbs (7.7kg)

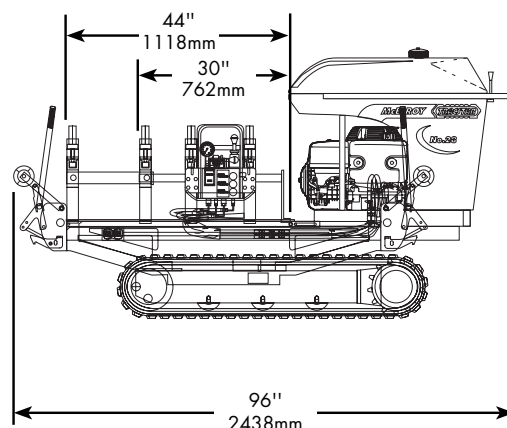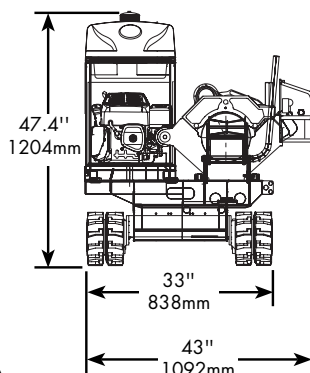

TracStar® No.412 Fusion Machine Specifications:

- Engine: 18.5 HP Liquid cooled
- Starting System: Electric
- Fuel Type: Diesel
- Fuel Tank Capacity: 5 Gals.
- Operational Tank Capacity: 8 Hrs.
- System Pressure: 1750 PSI
- Hydraulic Reservoir Capacity: 8 Gals
- Vehicle Speed: 2.5 MPH
- AC Output: 120 & 240V, 60Hz, 15 Amp
- Entire Machine Weight: 1,500 lbs (680kg)
- 3-jaw Carriage Weight: 283 lbs (128.4kg)
- 4-jaw Carriage Weight: 343 lbs (155.6kg)
- Facer Weight: 57 lbs (25.6kg)
- Heater Weight: 22 lbs (10kg)

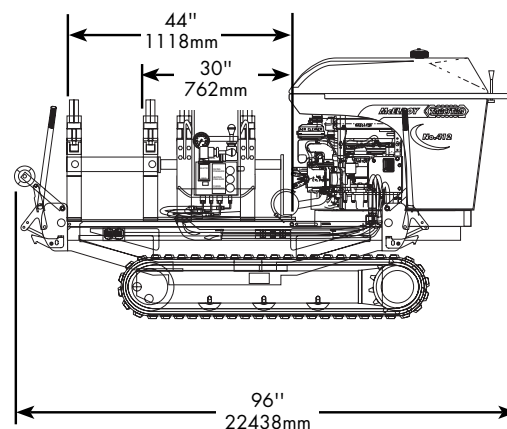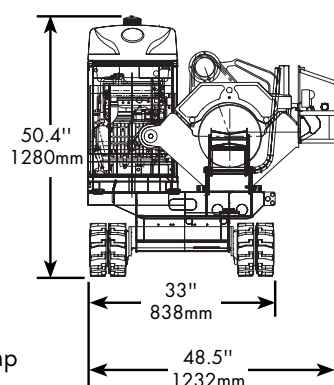





Specifications



TracStar® No.618 Fusion Machine

Specifications:

- Engine: 18.5 HP Liquid Cooled
- Starting System: Electric
- Fuel Type: Diesel
- Fuel Tank Capacity: 5 Gals.
- Operational Tank Capacity: 8 Hrs.
- System Pressure: 2000 PSI
- Hydraulic Reservoir Capacity: 8 Gals
- Vehicle Speed: 1.5 MPH
- AC Output: 120V & 240 V, 60Hz, 15 Amp
- Entire Machine Weight: 2000 lbs (909kg)
- 3-jaw Carriage Weight: 363 lbs (165kg)
- 4-jaw Carriage Weight: 441 lbs (200kg)
- Facer Weight: 89 lbs (40kg)
- Heater Weight: 29 lbs (13.2kg)

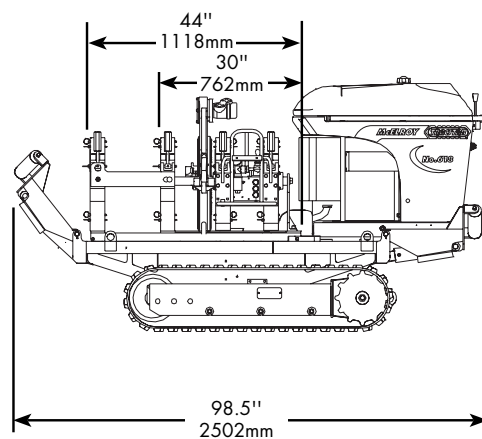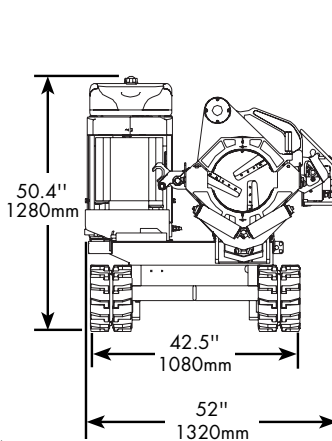

About this manual . . .

McElroy Manufacturing continually strives to give customers the best quality products available. This manual is printed with materials made for durable applications and harsh environments.

This manual is waterproof, tear resistant, grease resistant, abrasion resistant and the bonding quality of the printing ensures a readable, durable product.

The material does not contain any cellulose based materials and does not contribute to the harvesting of our forests, or ozone-depleting constituents. This manual can be safely disposed of in a landfill and will not leach into ground water.

TX001660-8-19-99



The leader by design.

P.O. Box 580550 Tulsa, Oklahoma 74158-0550, USA
www.mcelroy.com